


ONKYO SERVICE MANUAL

QUARTZ SYNTHESIZED TUNER AMPLIFIER MODELS TX-860/TX-860M

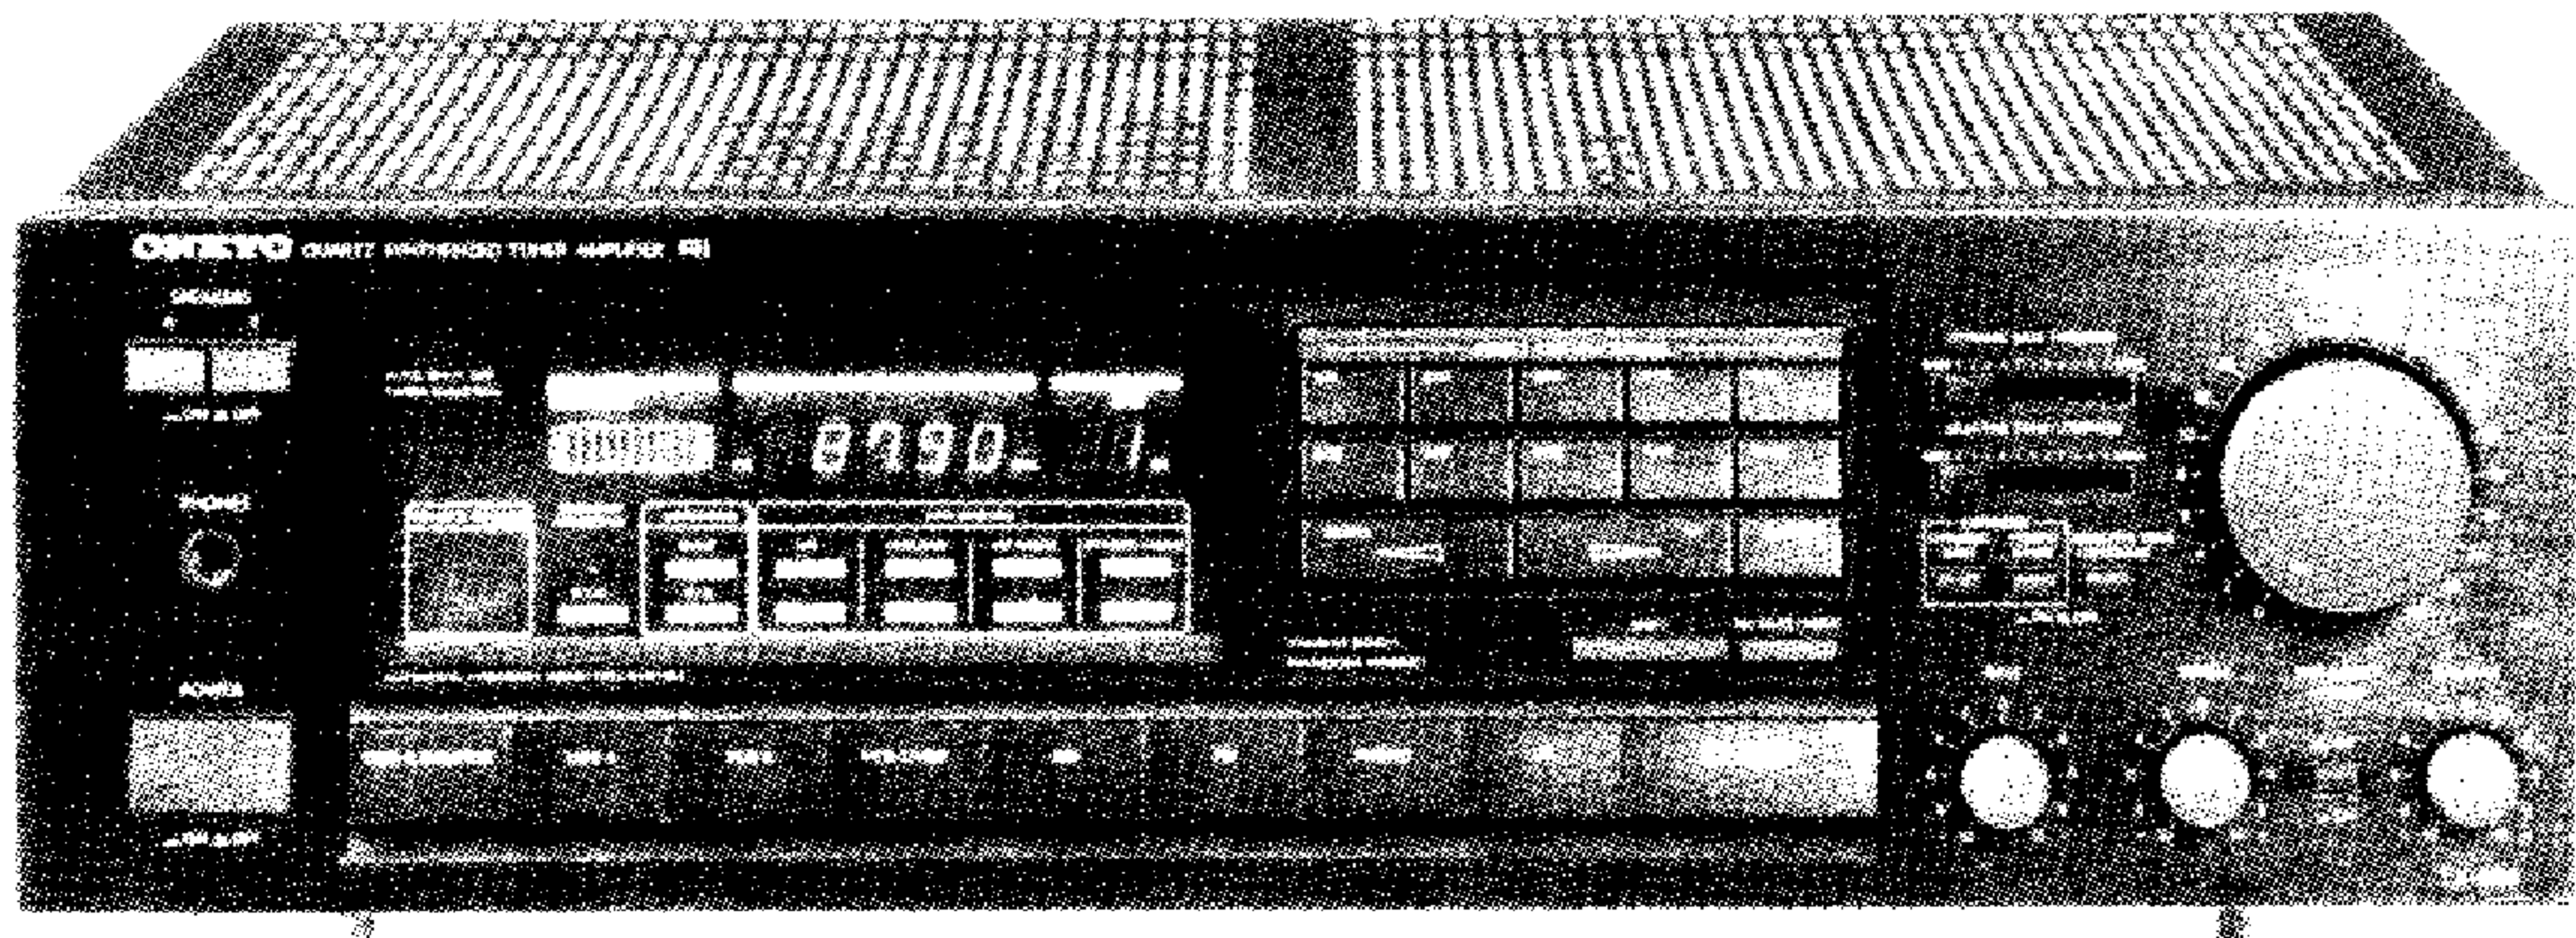

Black model

BHUD, BHUDN, MBHUDN	120V AC, 60Hz
BHUG	220V AC, 50Hz
BHUW	120/220V AC, 50/60Hz

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.



SPECIFICATIONS

AMPLIFIER SECTION

Power output:	70 watts per channel, min, RMS, at 8ohms, both channels driven, from 20Hz to 20kHz, with no more than 0.04% total harmonic distortion.
Musical Power Output:	2×180 watts at 4 ohms, 1kHz (DIN) 2×120 watts at 8 ohms, 1kHz (DIN)
Continuous Power Output:	2×105 watts at 4 ohms, 1kHz (DIN) 2×77 watts at 8 ohms, 1kHz (DIN)
Total Harmonic Distortion:	0.04% at rated power 0.04% at 1 watts output
IM Distortion:	0.04% at rated power 0.04% at 1 watts output
Damping Factor:	40 at 8 ohms
Frequency Response:	20-30,000Hz ±1dB
RIAA Diviation:	20-20,000Hz ±0.8dB
Sensitivity and Impedance:	Phono: 2.5mV/50 kohms CD: 150mV/50 kohms Tape Play: 150mV/50 kohms Tape Rec: 150mV/3.5 kohms
Phono Overload(MM):	120mV RMS at 1kHz, 0.04% THD.
Signal-to-Noise Ratio:	Phono: 85dB(at 10mV input, A weighted) 75dB(IHF A-202) CD/Tape: 95dB(A weighted) 80dB(IHF A-202)
Tone controls:	Bass: ±10dB at 100Hz Treble: ±10dB at 10kHz

TUNER SECTION

FM:

	-220V / Worldwide models-	-120V model-
Tuning Range:	87.50-108.00MHz(50kHz steps) 87.50-108.00MHz(50kHz steps) or 87.9-107.9kHz(200kHz steps) (Worldwide model)	87.9-107.9kHz(200kHz steps)
Usable Sensitivity:	Mono: 11.2dBf, 1.0 μV, 75ohms 0.9 μV(S/N 26dB, 40kHz Dev.) 75ohms DIN Stereo: 18.0dBf, 2.2 μV, 75ohms 23μV(S/N 46dB, 40kHz Dev.) 75ohms DIN	Mono: 10.8dBf, 1.9μV Stereo: 17.2dBf, 4.0 μV
50dB Quieting Sensitivity:	Mono: 18.0dBf, 2.2 μV, 75ohms Stereo: 37.2dBf, 20μV, 75ohms	Mono: 17.2dBf, 4.0 μV Stereo: 37.2dBf, 40μV
Capture Ratio:	1.5dB	1.5dB
Image Rejection Ratio:	85dB	40dB
IF Rejection Ratio:	90dB	90dB
Signal-to-Noise Ratio:	Mono: 73dB Stereo: 67dB	Mono: 73dB Stereo: 67dB
Alternate Channel Attenuation:		55dB
Selectivity:	50dB DIN(±300kHz, 40kHz dev.)	50dB
AM suppression Ratio:	50dB	Mono: 0.15%
Harmonic Distortion:	Mono: 0.15% Stereo: 0.25%	Stereo: 0.25%
Frequency Response:	30-15,000Hz ±1.5dB	30-15,000Hz ±1.5dB
Stereo Separation:	45dB at 1kHz 30dB at 100-10,000Hz	45dB at 1kHz 30dB at 100-10,000Hz
Muting Level:	17.2dBf, 4.0μV	17.2dBf, 4.0μV
AM:		
Tuning Range:	522-1611kHz(9kHz steps) 522-1611kHz(9kHz steps) or 530-1620kHz(10kHz steps) (Worldwide model)	530-1620kHz(10kHz steps)
Usable Sensitivity:	30μV	30μV
Image Rejection Ratio:	40dB	40dB
IF Rejection Ratio:	40dB	40dB
Signal-to-Noise Ratio:	40dB	40dB
Harmonic Distortion:	0.7%	0.7%

GENERAL

Dimensions(W×H ×D):	435×130×351mm 17-1/8" ×5-1/8" ×13-13/16"
Weight:	8.8kg., 19.4lbs.

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1. Replacing the fuses

For continued protection against fire hazard, replace only with same type and same rating fuse.

D (120V) model

Circuit no.	Part no.	Description
F901	252050	5 A (ST-6), Primary

G (220V) model

Circuit no.	Part no.	Description
F902	252075	2.5A-SE-EAK, Primary
F903	252075	2.5A-SE-EAK, AC outlet (Only 220V model)

W (Worldwide) model

Circuit no.	Part no.	Description
F901	252050	5 A (ST-6), Primary
F902	252075	2.5A-SE-EAK, Primary

2. Change of FM/AM band step.

With the exception of the models below, a BAND STEP selector switch is not provided.

(FM)

MODEL	BAND STEP	D717, J753	R119
UD	200kHz→50kHz	Additional	15kΩ→24kΩ
UG/UQ	50kHz→200kHz	Eliminated	24kΩ→15kΩ

(AM)

BAND STEP	D716, J754
10kHz→ 9kHz	Additional
9kHz→10kHz	Eliminated

In D716/7 1SS133 (Part No. 223163) is used. In J753/4, a jumper lead must be inserted. R119, with the muting amplitude determined, is on the back panel side of FM/AM tuner and selector circuit printed circuit board assembly test points TP-1 and TP-2.


— Worldwide model —

Worldwide models are equipped with a step band selector switch. This switch is located on the back panel. This switch is set to 50kHz (FM) and 9kHz (AM) at the factory, but may have to be reset to 200kHz and 10kHz depending on the area where the unit is used.

	De-emphasis	FM step	AM step
Europe:	50 μsec	50kHz	9kHz
U.S.A.:	75 μsec	200kHz	10kHz

3. Memory preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in

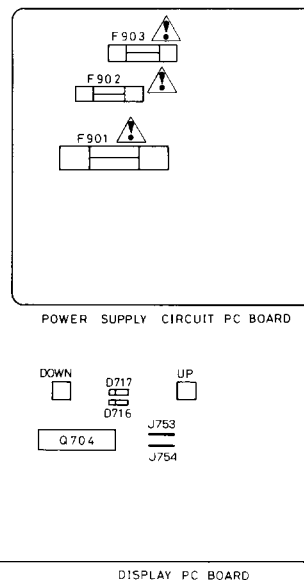

and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory the power switch must be turned on and off a few times each month to keep the back-up system operative. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

4. Safety-check out

(Only U.S.A. model)

After correcting the original service problem perform the following safety check before releasing the set to the customer.


Connect the insulating-resistance tester between the plug of power supply cord and terminal GND on the back panel. Specifications: 3.3 Mohm ±10% at 500V.

5. Change of voltage

Worldwide models are equipped with a voltage selector to conform with local power supplies. This switch is located on the back panel. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.

This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.

EXPLODED VIEW

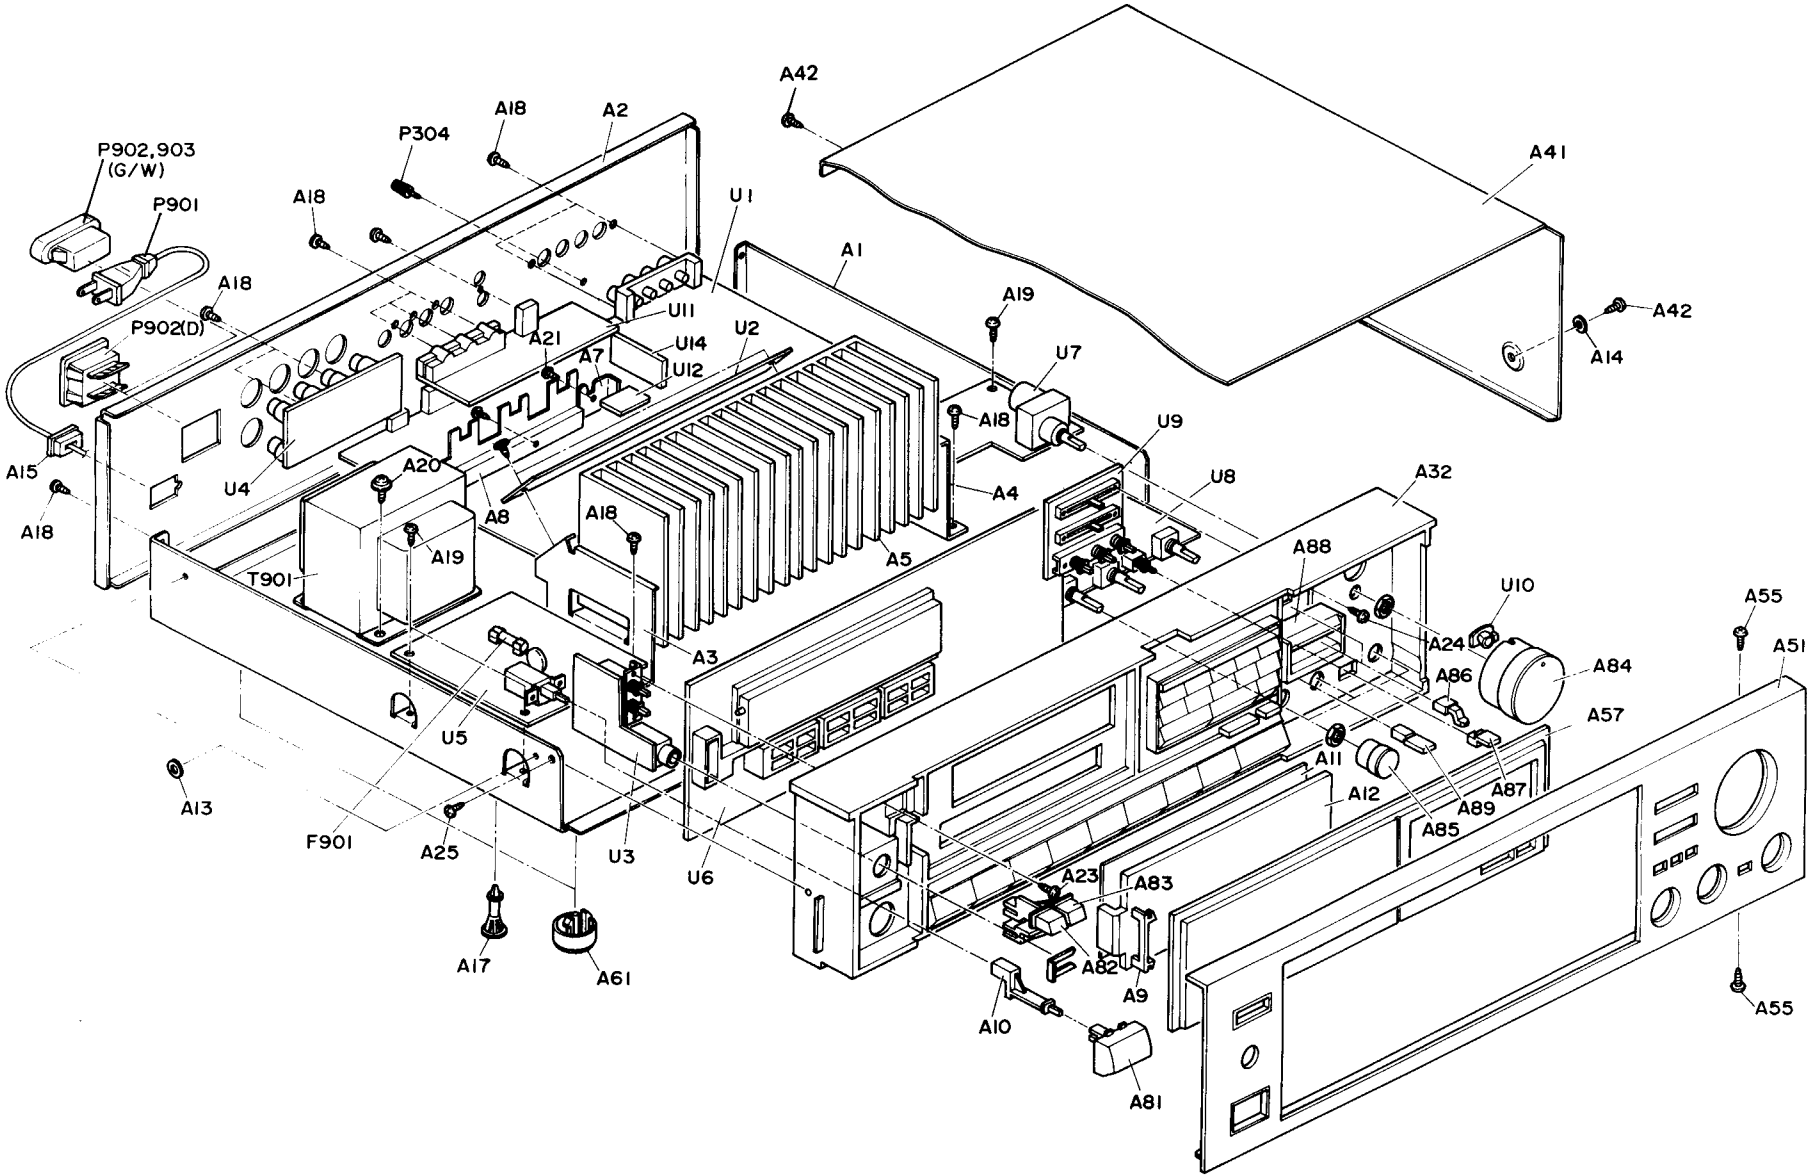

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
A1	27100163-1	Chassis
A2	27121255	Back panel <D>
	27121255-1	Back panel <G>
	27121255-2	Back panel <W>
A3	27141261A	Bracket LH
A4	27141262	Bracket RH
A5	27160225	Radiator
A7	27141263	Bracket SH
A8	27141264	Bracket H
A9	27190644	Holder,dial plate
A10	27273098B	Joint,power
A11	28133224	Back plate
A12	28130255	Dial plate
A13	27270147	Spacer <G/W>
A14	870048	3 × 8 × 0.8t,Nylon washer <G/W>
A15	27300750	△ Strainrelief
A17	27190524	Holder
A18	834430088	3TTS+8B(BC),Tapping screw
A19	831130088	3TTW+8B,Tapping screw
A20	830440089	4TTC+8C(BC),Tapping screw
A21	834430108	3TTS+10B(BC),Tapping screw
A23	82143006	3P+6FN(BC),Pan head screw
A24	82142004	2P+4F(BC),Pan head screw
A25	833430080	3TTP+8P(BC),Pan head screw
A32	27110491A	Front bracket ass'y
A41	28184394	Top cover
A42	834430088	3TTS+8B(BC),Tapping screw
A51	1A156121	Front panel ass'y
A55	833430080	3TTP+8P(BC),Tapping screw
A57	28191466-1A	Clear plate
A61	27175221A	Leg
A81	28323241-1A	Knob POWER
A82	28323361	Knob SPEAKER A
A83	28323363	Knob SPEAKER B
A84	28323365B	Knob VOLUME
A85	28323310	Knob TONE
A86	28322925	Knob SLIDE
A87	28323367	Knob PUSH
A88	27190647	Holder SLIDE
A89	28323369	Knob PUSH
F901	252050	△ 5A(ST-6),Primary fuse <D/W>
F902	252075	△ 2.5A-SE-EAK,Primary fuse <G/W>
F903	252075	△ 2.5A-SE-EAK,AC outlet fuse <G>
P304	25060044	14 × 3mm,Terminal GROUND

REF. NO.	PART NO.	DESCRIPTION
P901	253123,	△ AS-UC-6 #18,Power supply cord
	253136,	<D>
	253140 or	
	253146	
	253148 or	△ AS-CEE,Power supply cord <G/W>
	253150	
P902	25050341	△ NSCT-4P168T,AC outlet <D>
P902,P903	25050337	△ NSCT-2P164,AC outlet <G/W>
Q521,Q522	2501653,	2SC3856(O),
	2501654 or	2SC3856(Y) or
	2501655	2SC3856(P),Power amplifier transis-
		tor
Q523,Q524	2501663,	2SA1492(O),
	2501664 or	2SA1492(Y) or
	2501665	2SA1492(P),Power amplifier transis-
		tor
S903	25065123	△ NSS-1258P,Voltage selector switch
		<W>
T901	2300432	△ NPT-1033D,Power transformer <D>
	2300304	△ NPT-992G,Power transformer <G>
	2300305	△ NPT-992DG,Power transformer
		<W>
U1	1A156576-3	NAAR-3276-3, FM/AM tuner and
		selector circuit pc board ass'y <D>
	1A156576-3A	NAAR-3276-3A,FM/AM tuner and
		selector circuit pc board ass'y <G>
	1A156576-3B	NAAR-3276-3B,FM/AM tuner and
		selector circuit pc board ass'y <W>
U2	1A156577-3	NAAF-3277-3, Power amplifier pc
		board ass'y
U3	1A156578-3	NASW-3278-3, Speaker switch pc
		board ass'y
U4	1A156579-3	NAETC-3279-3, Speaker terminal
		pc board ass'y <D>
	1A156579-3A	NAETC-3279-3A,Speaker terminal
		pc board ass'y <G/W>
U5	1A156580-3	NAETC-3280-3, Const. voltage cir-
		cuit pc board ass'y
U6	1A156581-3	NADIS-3281-3, Display pc board
		ass'y <D>
	1A156581-3A	NADIS-3281-3A,Display pc board
		ass'y <G>
	1A156581-3B	NADIS-3281-3B,Display pc board
		ass'y <W>


REF. NO.	PART NO.	DESCRIPTION
U7	1A156582-3	NAAF-3282-3, Volume pc board
		ass'y <D>
	1A156574-1	NAAF-3574-1, Volume pc board
		ass'y <G/W>
U8	1A156583-3	NAAF-3283-3, Preamplifier pc
		board ass'y <D>
	1A156583-3A	NAAF-3283-3A,Preamplifier pc
		board ass'y <G/W>
U9	1A156584-3	NAAF-3284-3, Switch pc board
		ass'y
U10	1A156585-3	NADIS-3285-3, Volume indicator pc
		board ass'y <D>
	1A156575-1	NADIS-3575-1, Volume indicator pc
		board ass'y <G/W>
U11	1A156586-3	NAETC-3286-3, Video terminal pc
		board ass'y <D>
	1A156586-3A	NAETC-3286-3A,Video terminal pc
		board ass'y <G/W>
U12	1A156587-3	NAPS-3287-3, Power supply circuit
		pc board ass'y <D>
	1A156587-3A	NAPS-3287-3A,Power supply cir-
		cuit pc board ass'y <G>
	1A156587-3B	NAPS-3287-3B,Power supply cir-
		cuit pc board ass'y <W>
U14	1A073554-2	NAAF-3054-2, Equalizer amplifier
		pc board ass'y <D>
	1A086554-3	NAAF-3054-3, Equalizer amplifier
		pc board ass'y <G/W>

NOTE: <D >: Only 120V model
 <G >: Only 220V model
 <W >: Only Worldwide model


NOTE: THE COMPONENTS IDENTIFIED BY MARK△
 ARE CRITICAL FOR RISK OF FIRE AND
 ELECTRIC SHOCK. REPLACE ONLY WITH
 PART NUMBER SPECIFIED.

BLOCK DIAGRAM

—120V MODEL—
TUNER SECTION

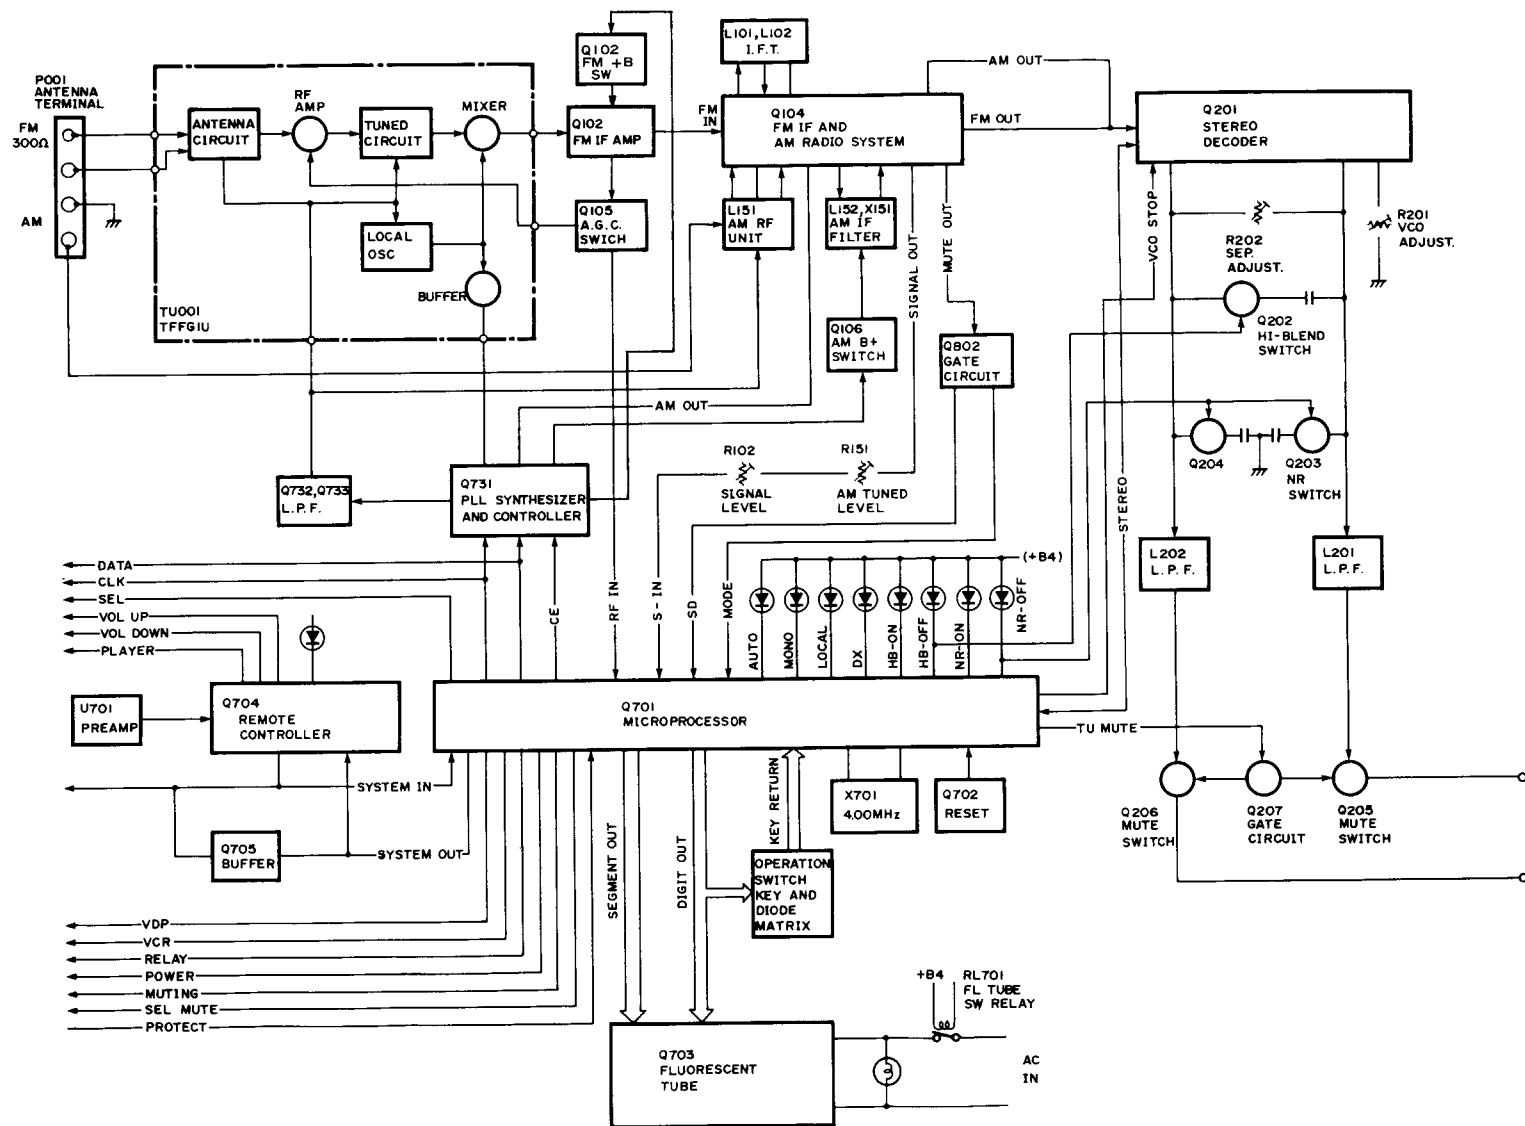


AMPLIFIER SECTION

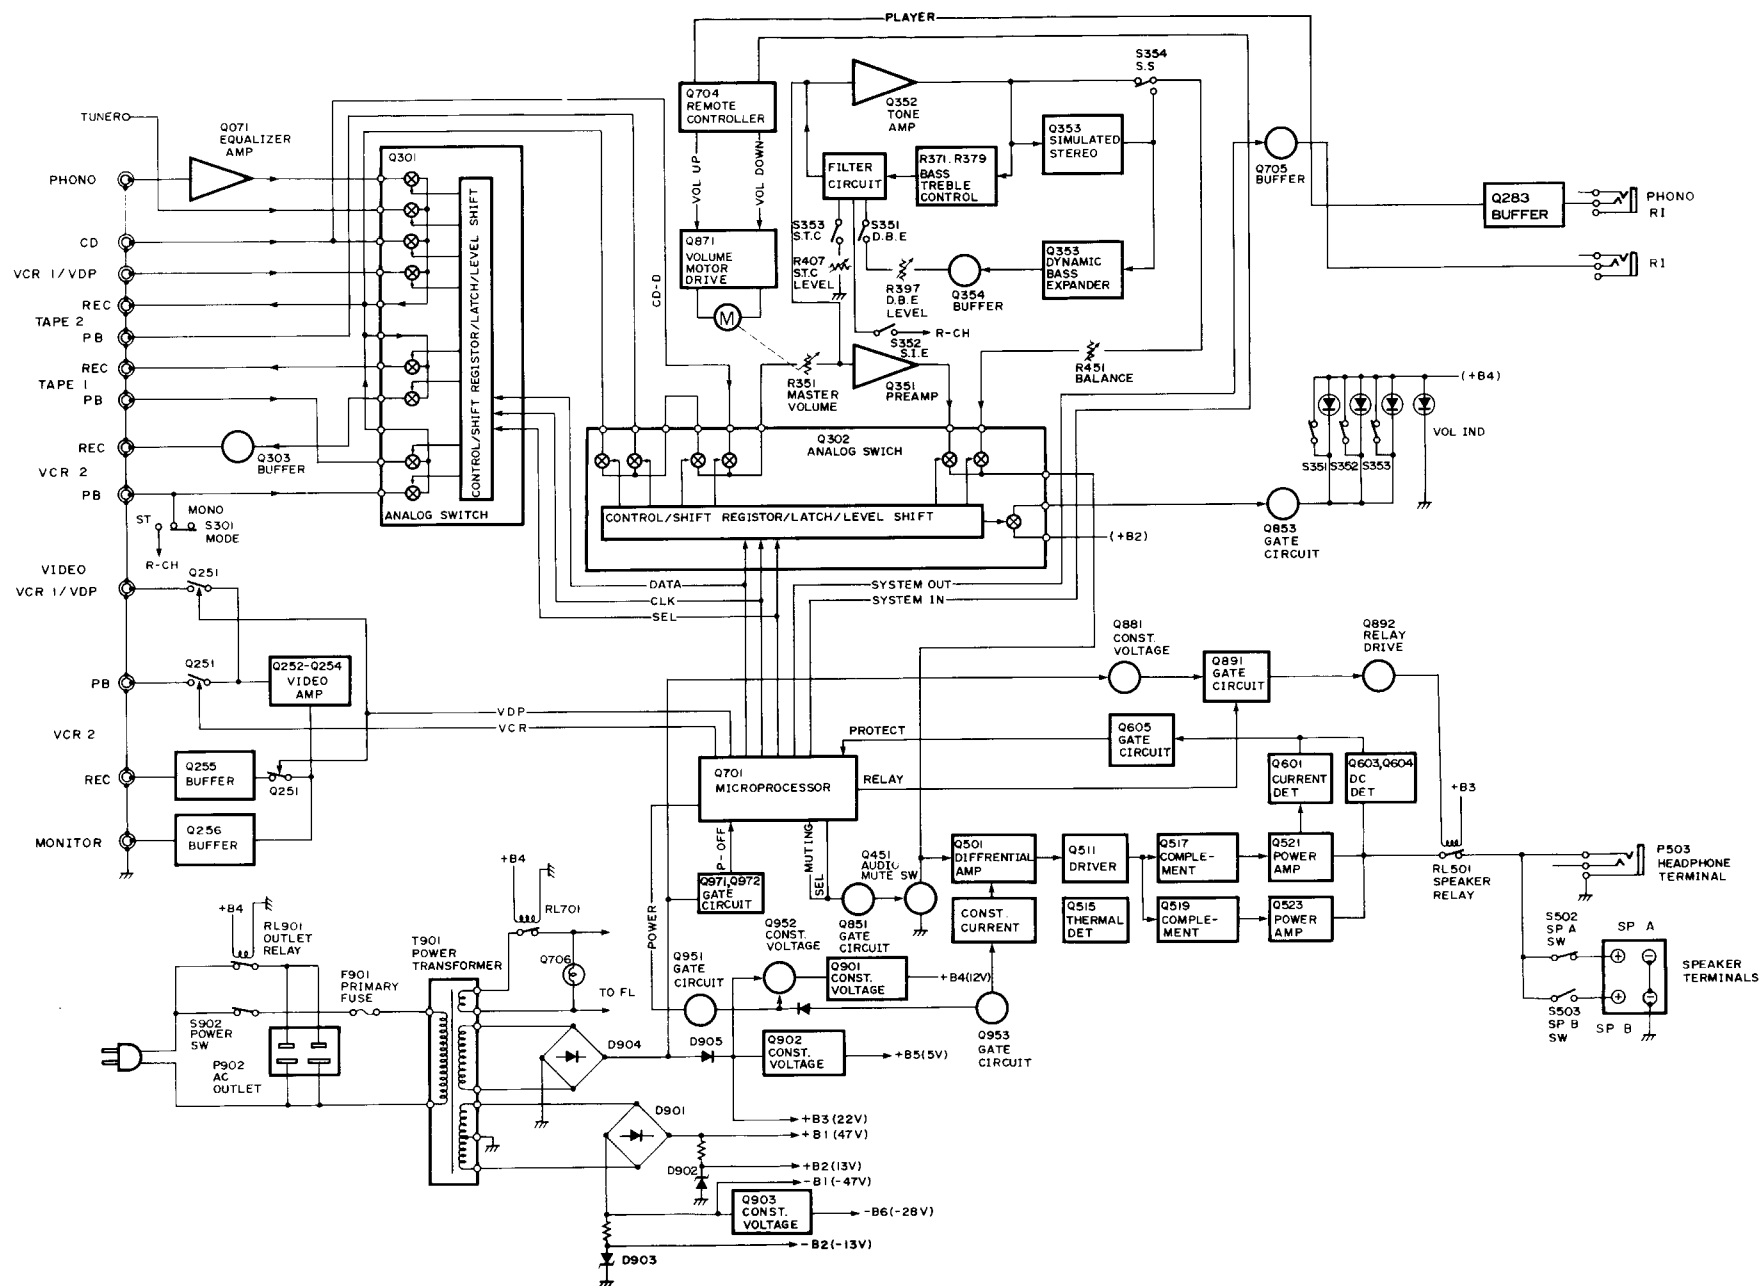


BLOCK DIAGRAM


—OTHER MODELS—
TUNER SECTION

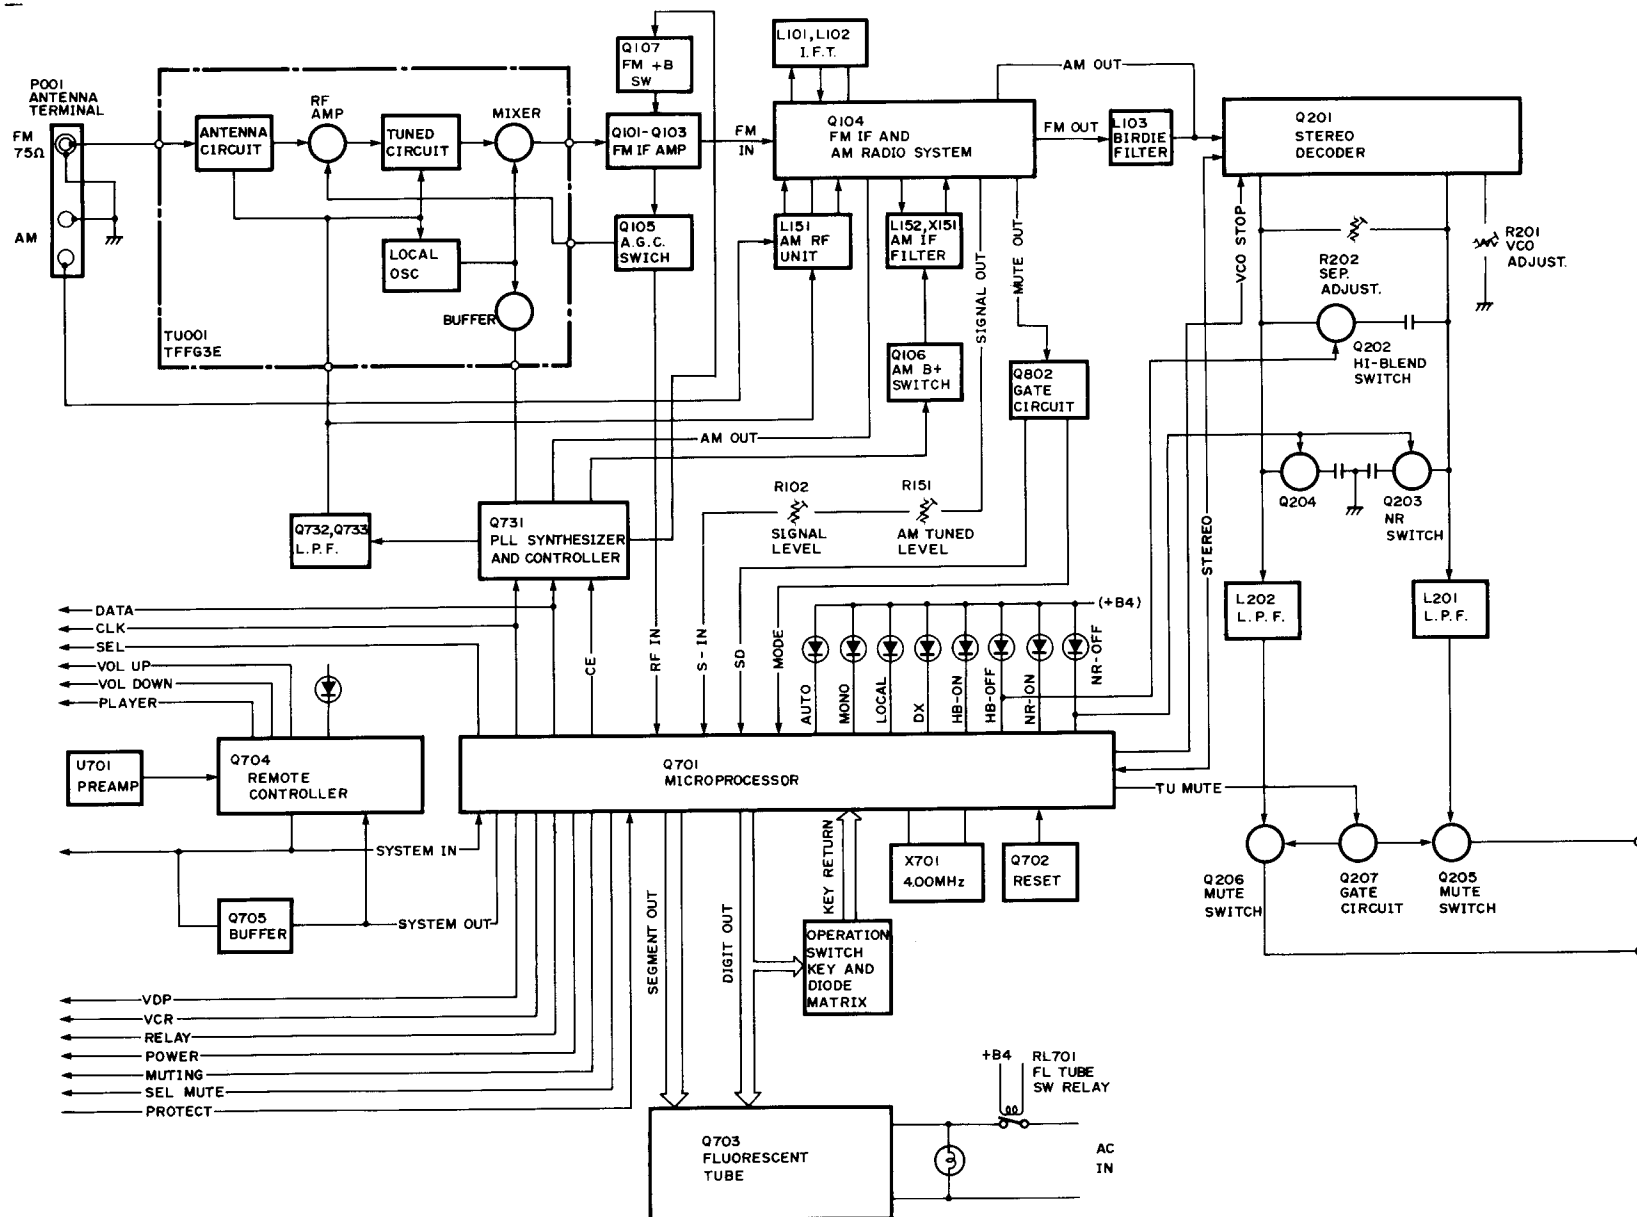

AMPLIFIER SECTION

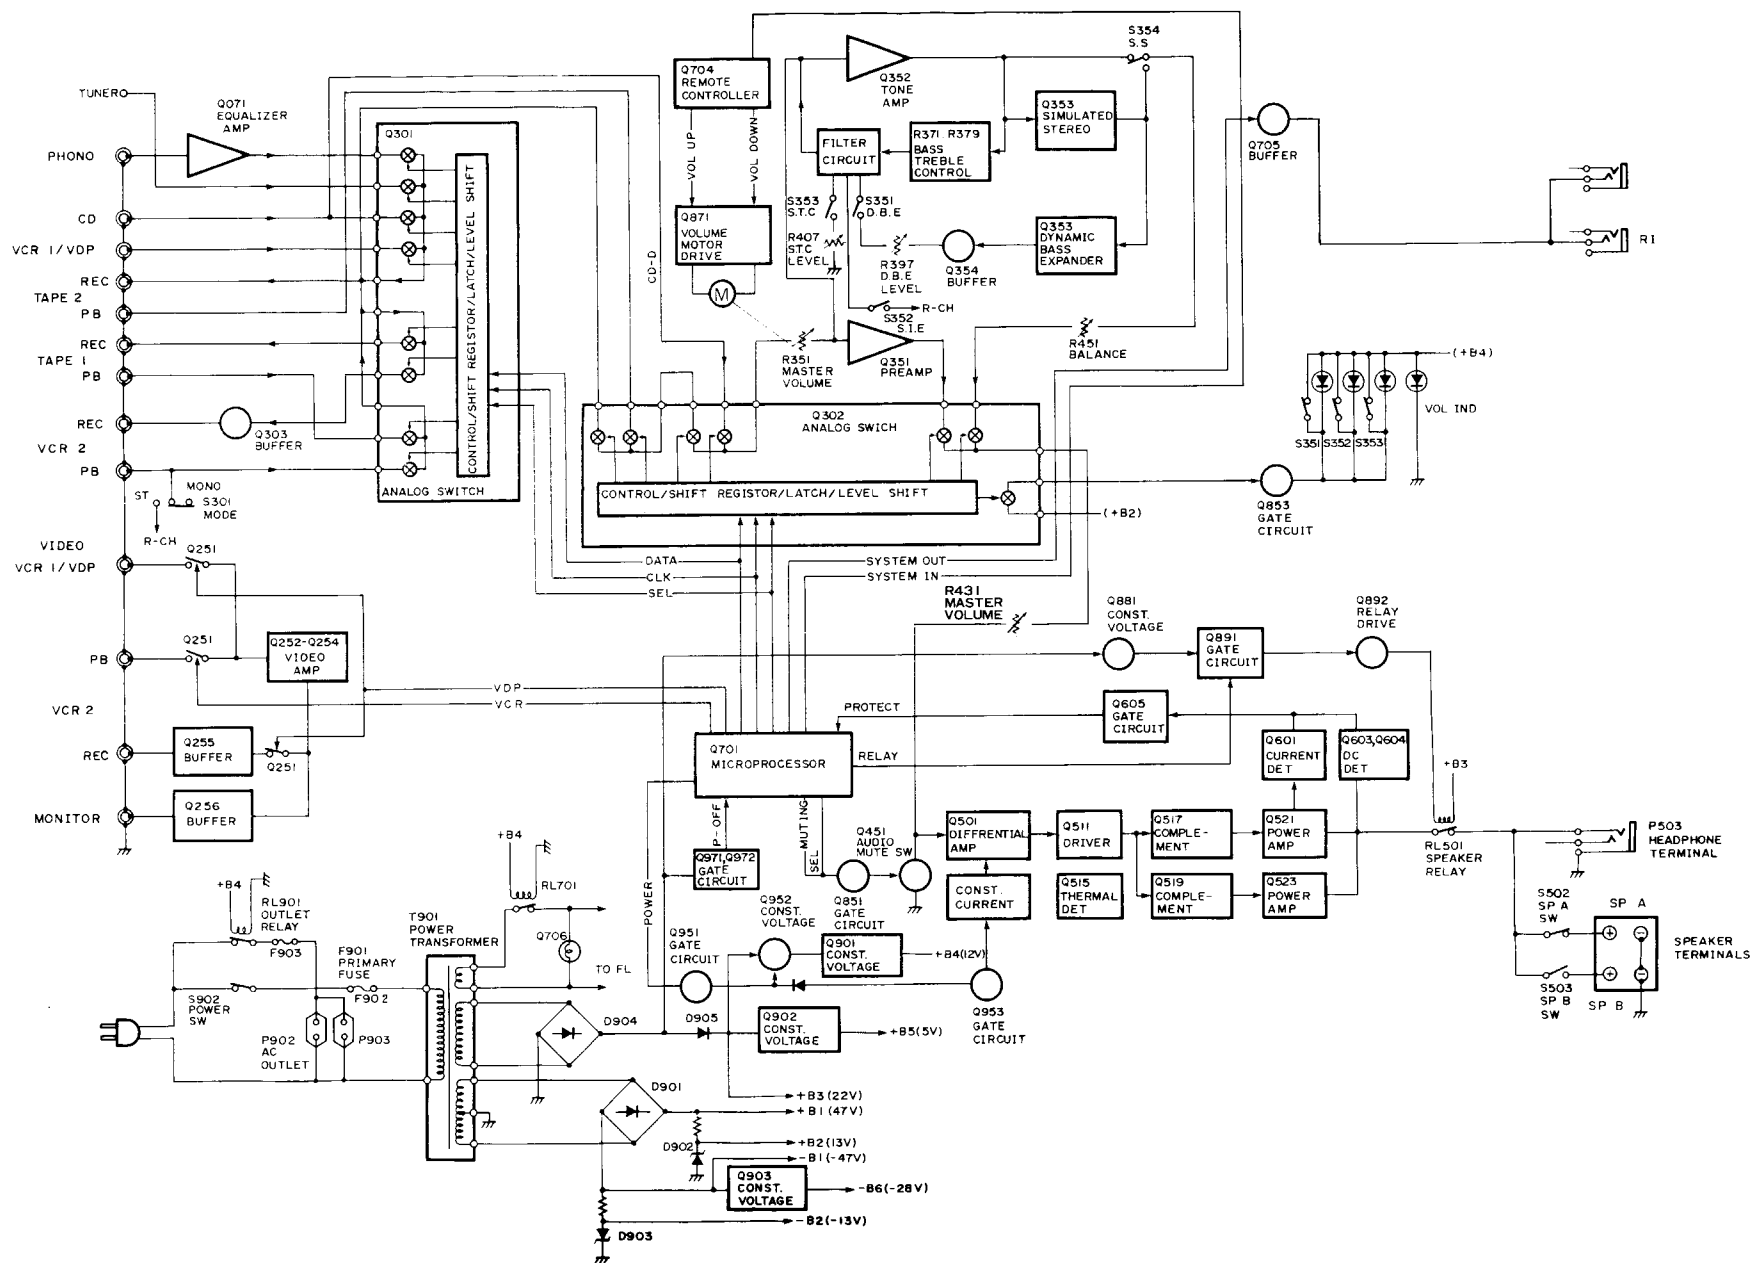

CONNECTION VIEW OF MICROPROCESSOR

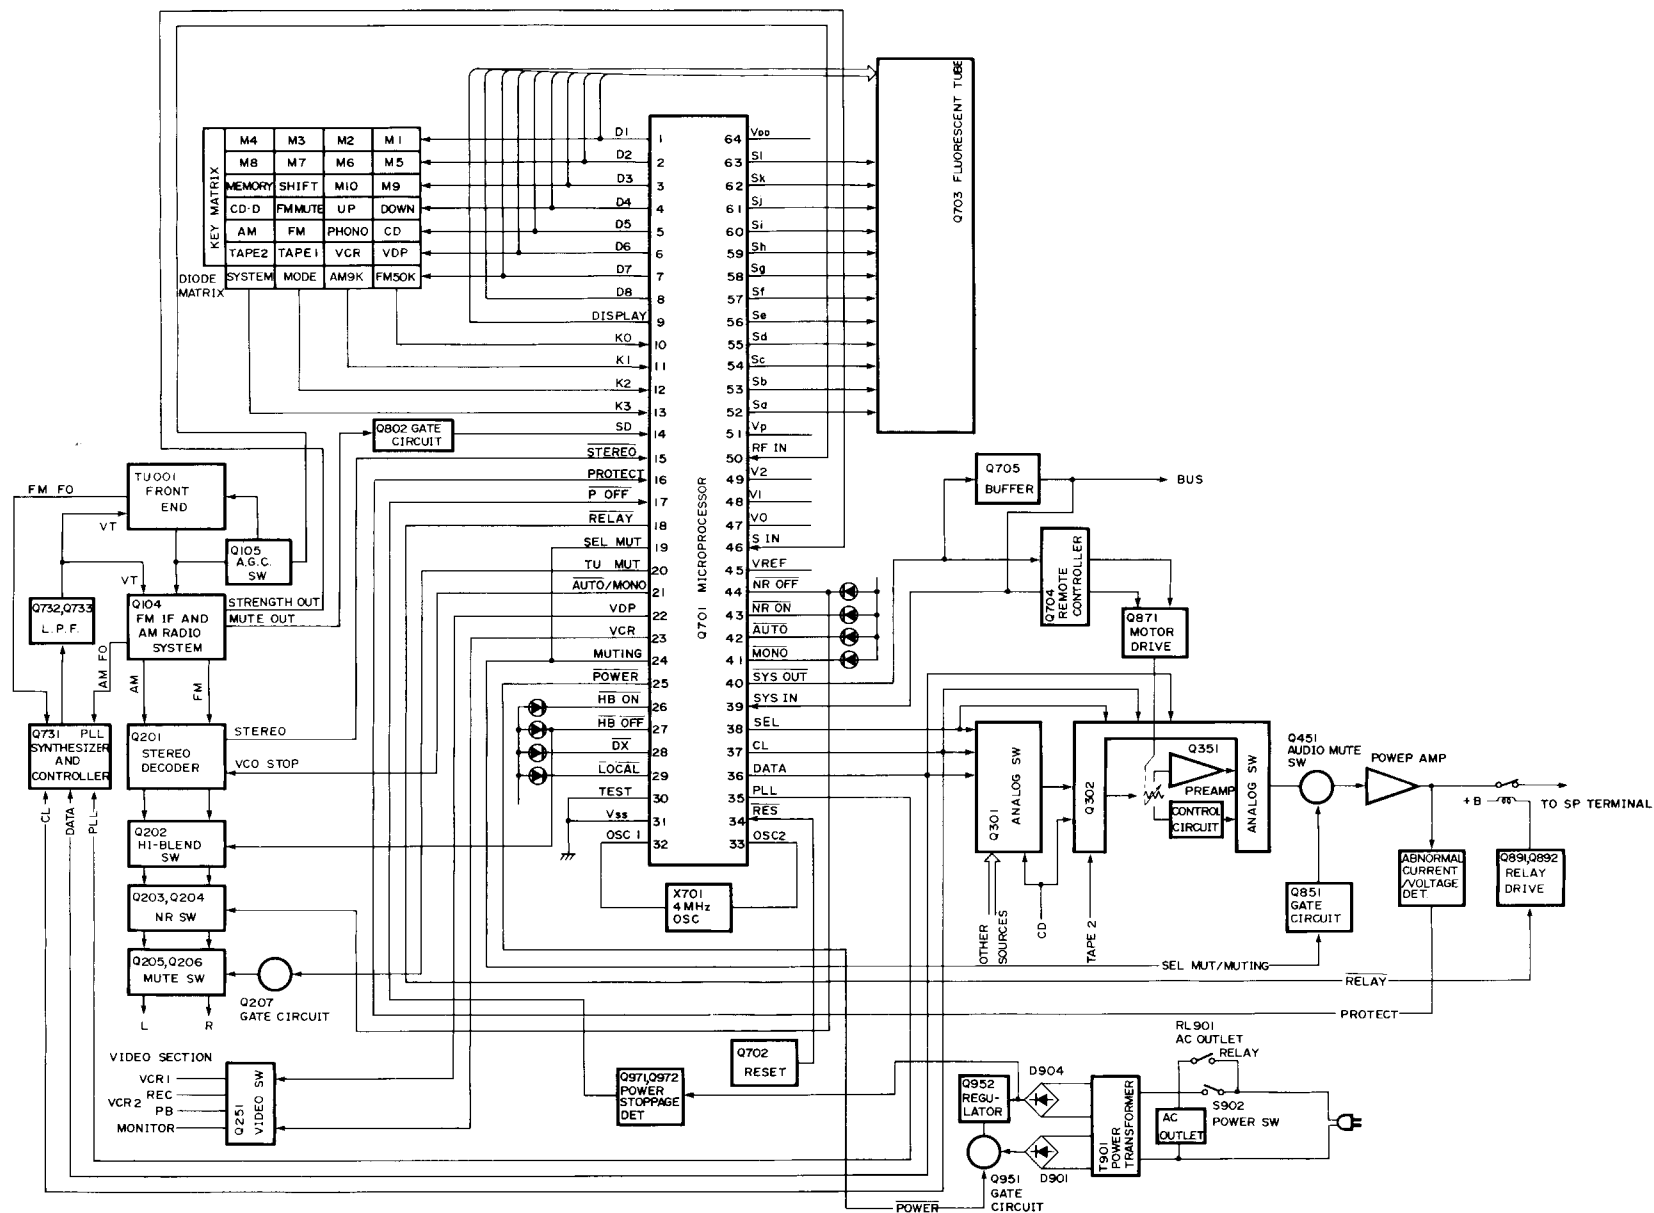

BLOCK DIAGRAM OF ICS

LC6568H-3643 (MICROPROCESSOR)

Terminal Descriptions

Pin No.	Terminal	Description
1	D1	These are the digit and key scan signal terminals. "H" when active.
2	D2	
3	D3	
4	D4	
5	D5	
6	D6	
7	D7	
8	D8	
9	DISPLAY	Display output terminal."H" when active.
10	K0	These are the input terminal for key return signal source and diode matrix."H" when active.
11	K1	
12	K2	
13	K3	
14	SD	Auto stop signal input terminal.Auto tuning stops when this terminal becomes the high level.
15	STEREO	This is the input terminal for detection of the stereo broadcast."L" when active.
16	PROTECT	This is the detection terminal for protection circuit.The speaker relay turns off when this terminal becomes the high level.
17	POWER OFF	This is the input terminal for detection of the stoppage of electric current."L" when the stoppage of electric current.
18	RELAY	This is the output terminal for control of the speaker relay."L" when active.
19	SEL MUTE	This is the muting output terminal when the selector key is operated."H" when active.
20	TU MUTE	This is the output terminal for muting control of tuner section."L" when active.
21	AUTO/MONO	This is the AUTO/MONO switching output terminal. "L" when AUTO.
22	VDP	These are the output terminal for control of video signal.
23	VCR	
24	MUTING	This is the output terminal for muting control. "H" when active.
25	POWER	This is the output terminal for power source.It is "H" for power on.
26	HB ON	This is the output terminal for indication of HI-BLEND ON. "L" when active.
27	HB OFF	This is the output terminal for indication of HI-BLEND OFF. "L" when active.
28	DX	This is the output terminal for indication of DX. "L" when active.
29	LOCAL	This is the output terminal for indication of LOCAL. "L" when active.
30	TEST	Test terminal.Connect to the ground.
31	Vss	Ground terminal.
32	OSC1	Connect to the 4.00MHz ceramic oscillator.
33	OSC2	
34	RES	This is the input terminal for reset. "L" when active
35	PLL	Connect to the terminal CE of PLL IC(LM7001).
36	DATA	This is the serial data output terminal.Connect to the terminal DATA of PLL IC and terminal DI of analog switches. (LC7821/LC7823)
37	CLOCK	This is the serial clock output terminal.Connect to the terminal CI of PLL IC and terminal CL of analog switches.
38	SEL	Connect to terminal SEL of analog switch(LC7821).
39	SYSTEM IN	This is the input terminal for system code. "H" when active.
40	SYSTEM OUT	This is the input terminal for system code. "L" when active.
41	MONO	This is the output terminal for indication of MONO. "L" when active.
42	AUTO	This is the output terminal for indication of AUTO. "L" when active.
43	NR ON	This is the output terminal for indication of NR ON. "L" when active.
44	NR OFF	This is the output terminal for indication of NR OFF. "L" when active.
45	VREF	This is the input terminal for comparator reference voltage.
46	S IN	This is the signal strength input terminal.
47	V0	This is the output terminal for comparator reference voltage.
48	V1	This is the output terminal for comparator reference voltage.
49	V2	This is the output terminal for comparator reference voltage.
50	RF IN	This is the input terminal for control of AGC. "H" when active.
51	VP	Pull-down resistor connection terminal of FIP controller/driver.

Pin No.	Terminal	Description
52	Sa	These are the output terminal for segment signal. “H” when active.
53	Sb	
54	Sc	
55	Sd	
56	Se	
57	Sf	
58	Sg	
59	Sh	
60	Si	
61	Sj	
62	Sk	
63	Sl	
64	VDD	This is the device power source terminal. At the time of operation, the supply is 5V. The internal data memory (RAM) is maintained by means of the super capacitor.

FM50K (FM band setting)


FM50K	Region	Frequency range	Channel space	Reference frequency	IF frequency
1	Europe	87.50 ~ 108.00 MHz	50 kHz	25 kHz	10.7 MHz
0	U.S.A.	87.9 ~ 107.9 MHz	200 kHz	25 kHz	10.7 MHz

AM9


AM9K	Region	Frequency range	Channel space	Reference frequency	IF frequency
1	Europe	522 ~ 1611 kHz	9 kHz	9 kHz	450 kHz
0	U.S.A.	530 ~ 1620 kHz	10 kHz	10 kHz	450 kHz

Connection of fluorescent tube and microprocessor**ANODE CONNECTION**



	8 G (D 8)	7 G (D 7)	6 G (D 6)	5 G (D 5)	4 G (D 4)	3 G (D 3)	2 G (D 2)	1 G (D 1)
a	SLEEP		a	a	a	a	a	a
b	CD DIRECT		b	b	b	b	b	b
c	MEMORY		c	c	c	c	c	c
d	11-20		d	d	d	d	d	d
e	1-10	FM FM MUTE	e	e	e	e	e	e
f	AUDIO MUTE	STEREO	f	f	f	f	f	f
g	—	AM	g	g	g	g	g	g
h	T-2 MONITOR	OFF	—	—	—	h	—	h
i	—	ON	i	—	i	—	—	i
j	—	MIN	j	—	—	—	—	j
k	—	kHz	—	—	k	k	—	k
l	—	MHZ	—	—	DP	—	—	CH
m	PRESET STATION	—	—	—	—	—	—	—
n	SIGNAL FREQUENCY / INPUT SELECTOR	—	—	—	—	—	—	—
o	—	SIGNAL STRENGTH	—	—	—	—	—	—
p	—		—	—	—	—	—	—

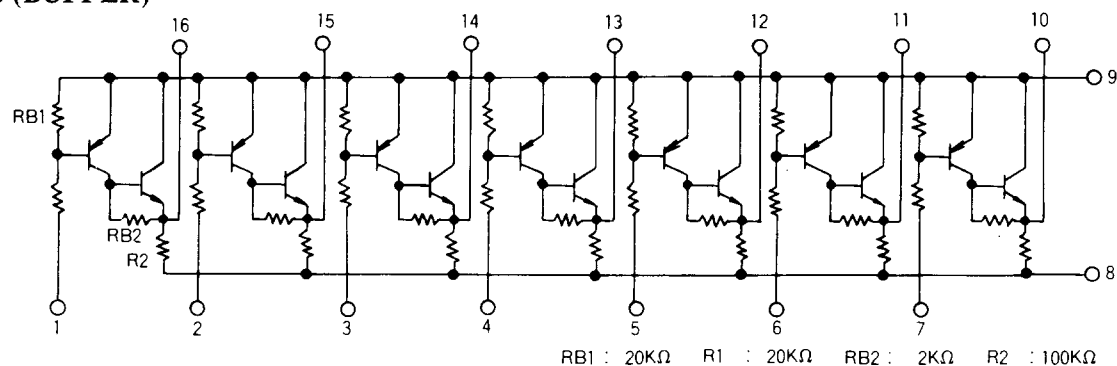μPA81C (BUFFER)

7-BT-95GK (FLUORESCENT TUBE)

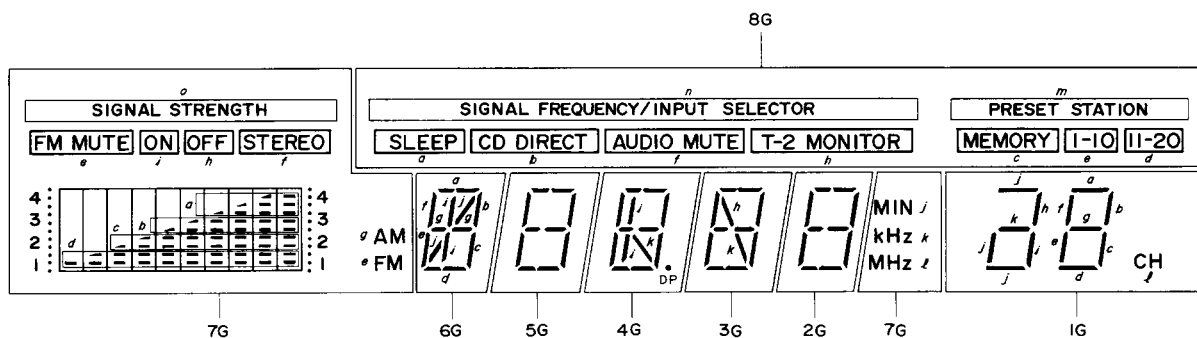


LC7823 (ANALOG SWITCH)

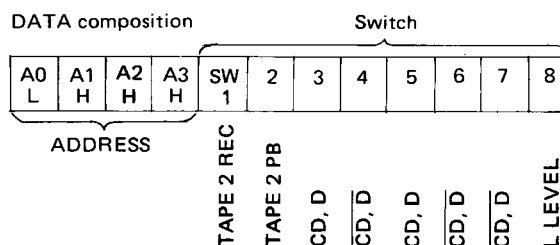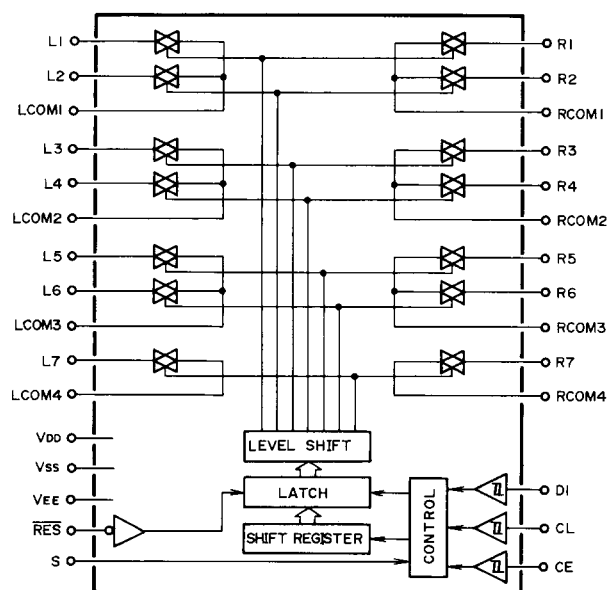


The source becomes ON when the bit of switch becomes high.

Pin No.	Terminal	Description	Pin No.	Terminal	Description
1 (L1)	TAPE 2 REC	Input/output terminals of audio signal of left channel. Control to the inside analog switch at the serial data.	16	VSS	Ground terminal.
2 (L2)	TAPE 2 PB		17	S	Selector terminal.
3	L COM 1		18	RES	Reset terminal. When power is turned ON, the condition of the analog switch is not determined, but when this terminal is "L", all analog switches are OFF.
4 (L3)	CD-D		19	VDD	Power supply terminal. (+15V)
5 (L4)	CD-D		20	R COM 4	Input/output terminals of audio signal of right channel. Control to the inside analog switch at the serial data.
6	L COM 2		21 (R7)	CD-D	
7 (L5)	CD-D		22	R COM 3	
8 (L6)	CD-D		23 (R6)	CD-D	
9	L COM 3		24 (R5)	CD-D	
10 (L7)	CD-D		25	R COM 2	
11	L COM 4		26 (R4)	CD-D	
12	VEE	Negative power supply terminal. (−15V)	27 (R3)	CD-D	
13	CE	Chip enable terminal. Connect to SEL terminal of LC6568H-3643.	28	R COM 1	
14	D1	Serial data input terminal. Connect to DATA terminal of LC6868H-3643.	29 (R2)	TAPE 2 PB	
15	CL	Serial clock input terminal. Connect to CLOCK terminal of LC6868H-3643.	30 (R1)	TAPE 2 REC	

LC7821 (Analog switch)

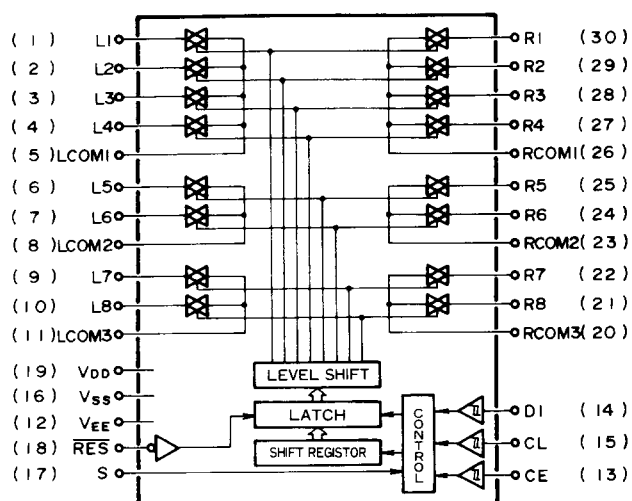


DATA composition

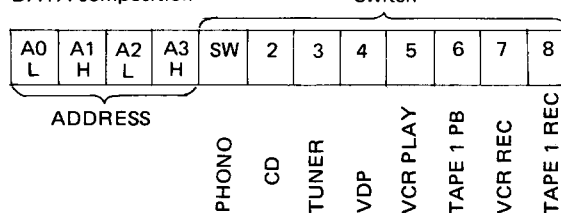


The source becomes ON when the bit of switch becomes high.

Pin No.	Terminal	Description	Pin No.	Terminal	Description
1	PHONO	Input/output terminals of audio signal of left channel. Control to the inside analog switch at the serial data.	16	Vss	Ground terminal.
2	CD		17	S	Selector terminal.
3	TUNER		18	RES	Reset terminal. When power is turned ON, the condition of the analog switch is not determined, but when this terminal is "L", all analog switches are OFF.
4	VDP		19	VDD	Power supply terminal. (+15V)
5	L COM 1		20	R COM 3	Input/output terminals of audio signal of right channel. Control to the inside analog switch at the serial data.
6	VCR PB		21	TAPE 1 REC	
7	TAPE 1 PB		22	VCR REC	
8	L COM 2		23	R COM 2	
9	VCR REC		24	TAPE 1 PB	
10	TAPE 1 REC		25	VCR P	
11	L COM 3		26	R COM 1	
12	Vss	Negative power supply terminal. (-15V)	27	VDP	
13	CE	Chip enable terminal. Connect to SEL terminal of LC6568H-3643.	28	TUNER	
14	D1	Serial data input terminal. Connect to DATA terminal of LC6868H-3643.	29	CD	
15	CL	Serial clock input terminal. Connect to CLOCK terminal of LC6868H-3643.	30	PHONO	


μPC1161C3 (FM stereo decoder)

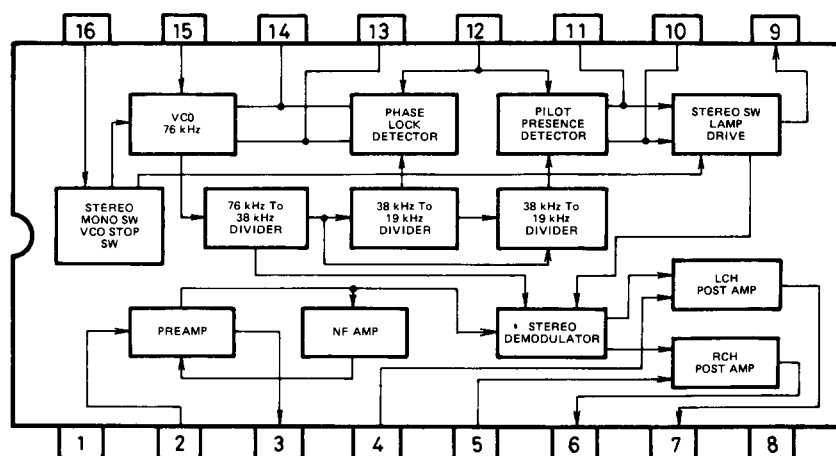



LM7001 (PLL SYNTHESIZER AND CONTROLLER)

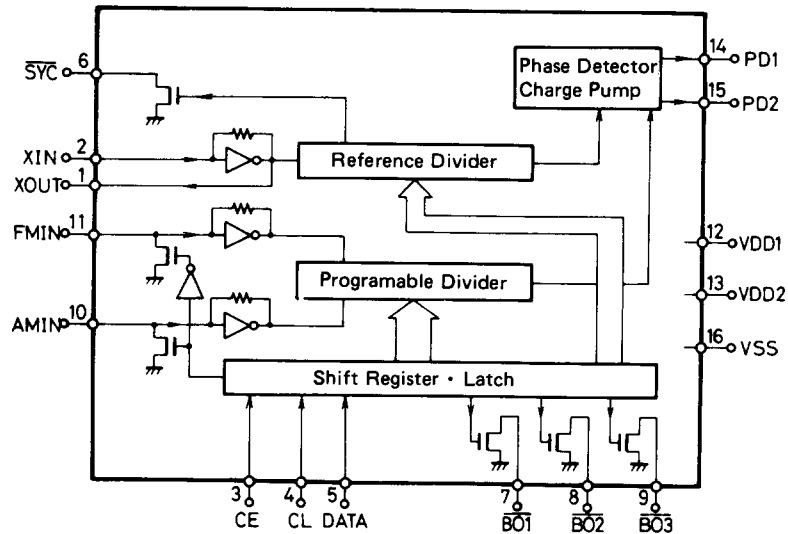

Pin No.	Terminal	Description
1	XOUT	Connect to the 7.2 MHz crystal oscillator.
2	XIN	
3	CE	Chip enable terminal. Connect to the PLL terminal of LC6568H-3643.
4	CL	Serial clock input terminal. Connect to the CLOCK terminal of LC6568H-3643.
5	DATA	Serial data input terminal. Connect to the DATA terminal of LC6568H-3643.
6	SYN	Not used.
7	BO1	Phono control signal output terminal. "L" when phono.
8	BO2	FM control signal output terminal. "L" when FM.
9	BO3	AM control signal output terminal. "L" when AM.
10	AMIN	AM local oscillator input terminal.
11	FMIN	FM local oscillator terminal.
12	VDD1	Power supply terminal for back-up.
13	VDD2	Power supply terminal.
14	PD1	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided local oscillator frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies matched. The output is applied to the variable capacitor diode in the local oscillator through the low pass filters.
15	PD2	
16	Vss	Ground terminal.

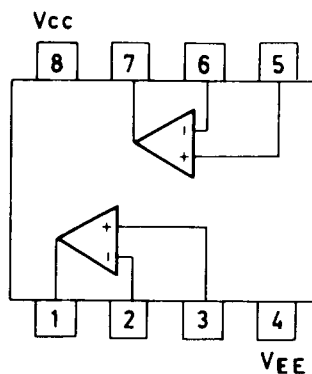 μ PC4570C (OP AP)

LC6527C-3987 (REMOTE CONTROLLER)

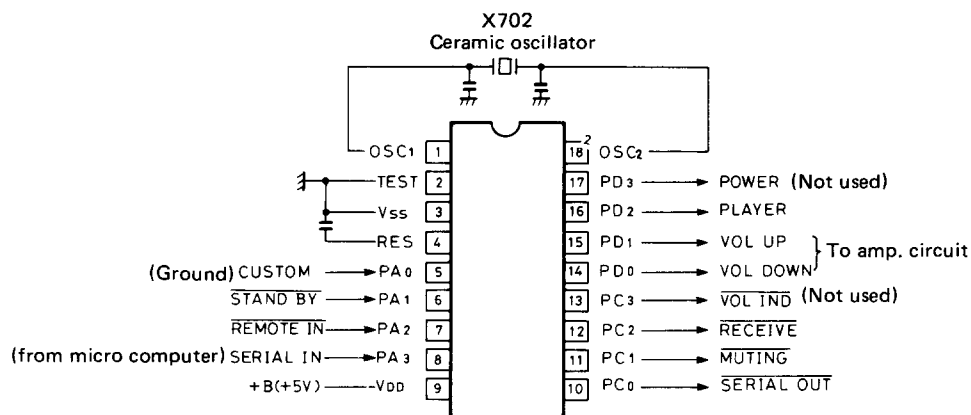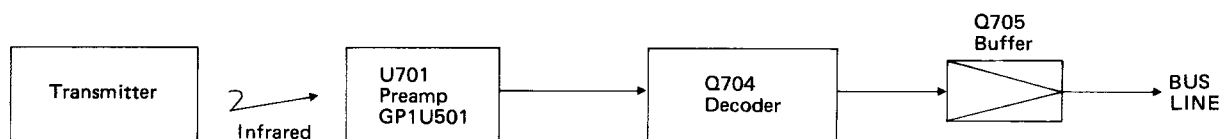

Connection diagram

Terminal No.	Symbol	Terminal	Description
1 18	OSC1 OSC2	OSC	Connect to the 4MHz ceramic oscillator.
2	TEST	TEST	Test terminal. Connect to the ground.
3	V _{ss}	GND	Ground terminal.
4	$\overline{\text{RES}}$	$\overline{\text{RES}}$	Reset terminal.
5	PA0	CUSTOM	The custom code for decode is selected at this terminal. For U.S.A., the level is low.
6	PA1	$\overline{\text{STANDBY}}$	Terminal for STANDBY detection. During low input, only the POWER code is decoded.
7	PA2	$\overline{\text{REMOTE IN}}$	Signal input terminal for remote control preamp. Active low.
8	PA3	SERIAL IN	Serial data input terminal from microprocessor.
9	V _{DD}	+B	Power supply terminal.
10	PC0	$\overline{\text{SERIAL OUT}}$	Output at this terminal are the custom code (16 bit) remote control code input to REMOTE IN, data code (8 bit), and the serial code (12 bit) that has been converted corresponding to the decoded data code (8 bit).
11	PC1	$\overline{\text{MUTING}}$	At this terminal, the audio muting code that is input is inverted for each L/H. When power is ON, the level is high.
12	PC2	$\overline{\text{RECEIVE}}$	This is the display output for remote control reception. Output is low when decoded code is being received.
13	PC3	$\overline{\text{VOL IND}}$	During output of VOLUME UP/DOWN, a pulse ($\sqrt{\text{T}} \text{ } \overline{\text{T}} \text{ } \sqrt{\text{T}}$; T = 0.3ms) is output.
14	PD0	VOL DOWN	When the volume DOWN code is input, a high pulse of 120ms is output.
15	PD1	VOL UP	When the volume UP code is input, a high pulse of 120ms is output.
16	PD2	PLAYER	When the player PLAY/REJECT is input, a high pulse of 200ms is output.
17	PD3	POWER	The power code input inverts the L/H. Level is high for power being turned ON.

ADJUSTMENT PROCEDURES

Preparation

• Input

FM mono: 1kHz, 75kHz devi., 60dB/ μ V

FM stereo: 1kHz, L+R 67.5kHz devi.: Pilot signal 19kHz
7.5kHz devi.

AM: 400Hz, 30% mod.,

• Output

Connect the non-inductive type resistor of 8 ohms to the speaker terminal A of left and right channels unless otherwise noted.

• Standard knob position

TAPE MONITOR	SOURCE
VOLUME	Maximum
BASS/TREBLE/BALANCE	Center
VCR 2 MODE.	STEREO
SPEAKER	A
SIMULATED STEREO	OFF
DYNAMIC BASS EXPANDER	OFF
STEREO IMAGE EXPANDER	OFF
SELECTIVE TONE CONTROL	OFF


Amplifier section

1. Idling current adjustment

Connect the DC voltmeter to the terminals IID and VCT on the power amplifier pc board.

Adjust the semi-fixed resistors R533 and R534 so that the indication of voltmeter is $7.5 \pm 1.5\text{mV}$.

Notes: VOLUME Maximum, Open load,
Adjust after switching on for 5 minutes.

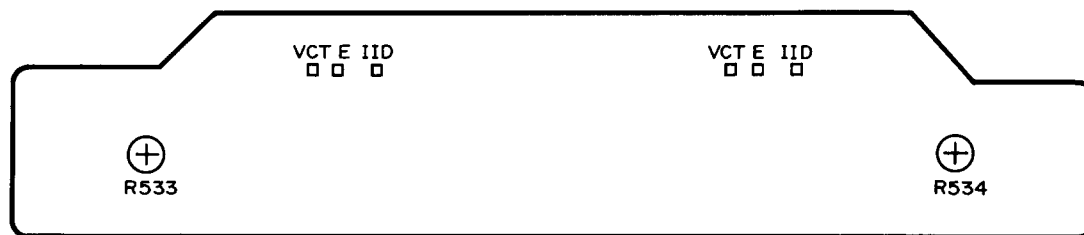


Power amplifier pc board

Section

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Turning dial setting	Output indicator	Adjustment	Adjust for	Remarks
FM IF	1	Fig. 1	99.1MHz 1kHz, 75kHz devi. 65dBf (60dB)	—	99.1MHz	DC voltmeter	L101	0V ± 20mV	Mode switch: MONO Repeat the steps 1 and 3 until no further adjustment is necessary
	2					AC voltmeter	IF on the front end	Maximum	
	3					Distortion analyzer	L102	Minimum	
Stereo indicator level	1	Fig. 3	99.1MHz 17.2dBf (12dB) Ext. modulation	L + R : 1kHz 67.5kHz devi.	99.1MHz	Stereo indicator	R101	Light on	Mode switch: STEREO
	2		99.1MHz 16.2dBf (11dB) Ext. modulation	Pilot signal 19kHz 7.5kHz devi.				Light off	
VCO		Fig. 2	99.1MHz 1kHz, 75kHz devi. 65dBf (60dB)	—	99.1MHz	Frequency counter	R201	19kHz ± 10Hz	
Stereo distortion		Fig. 3	99.1MHz 65dBf (60dB) Ext. modulation	L or Rch. 1kHz	99.1MHz	Distortion analyzer	IF on the front end	Minimum	Don't turn more than ± 180°
Stereo separation	1	Fig. 3	99.1MHz 65dBf (60dB) Ext. modulation	Lch. 1kHz	99.1MHz	Rch. AC voltmeter	R202	Minimum	Maximum and same separation
	2			Rch. 1kHz		Lch. AC voltmeter		Minimum	
Blend level		Fig. 3	99.1MHz 35.2dBf (30dB) 1kHz, 75kHz devi.	—	99.1MHz	Hi-blend indicator	R102	Light off	

Section

Item	AM SG output	Tuned frequency	Output indicator	Adjustment point	Adjust for
		530kHz [522kHz] (531kHz)	Digital DC voltmeter	OSC on RF block	1.3V ± 0.1V
	600kHz(603kHz) 400Hz 30% mod. 60dB/m	600kHz (603kHz)	AC voltmeter	RF on RF block	Maximum
	1000kHz (999kHz) 400Hz 30% mod. 60dB/m	1000kHz (999kHz)	AC voltmeter	L152	Maximum
	Same as above	1000kHz (999kHz)	First signal indicator	R151	Light on

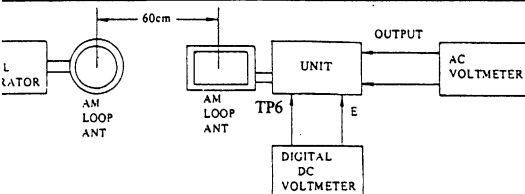

[] : 10kHz step model
() : W model
() : 9kHz step model

Reference specifications

FM Tuned voltage
87.9MHz 2.0 ± 0.5V
107.9MHz 7.7 ± 0.5V
(120V model)
87.5MHz 2.0 ± 0.5V
108.0MHz 7.7 ± 0.5V
(Other models)

Auto stop level AM: Less than 66dB/m
FM: Less than 17dBμ

AM Tuned voltage
530kHz 1.3 ± 0.5V
1620kHz 8.0 ± 0.5V
(120V model)
522kHz 1.3 ± 0.5V
1611kHz 8.0 ± 0.5V
(Other models)


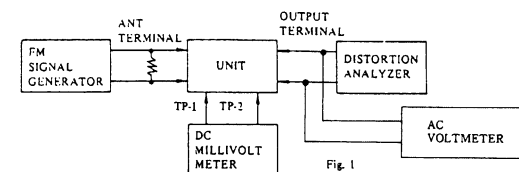


Fig. 1

 

Use the high impedance probe. (10:1)

Fig. 2


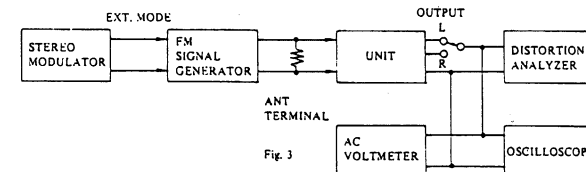


Fig. 3

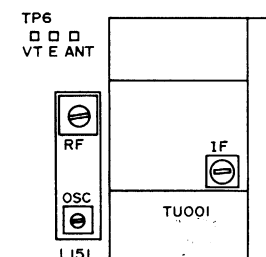


FM/AM tuner and selector switch pc board

R202

TP4

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

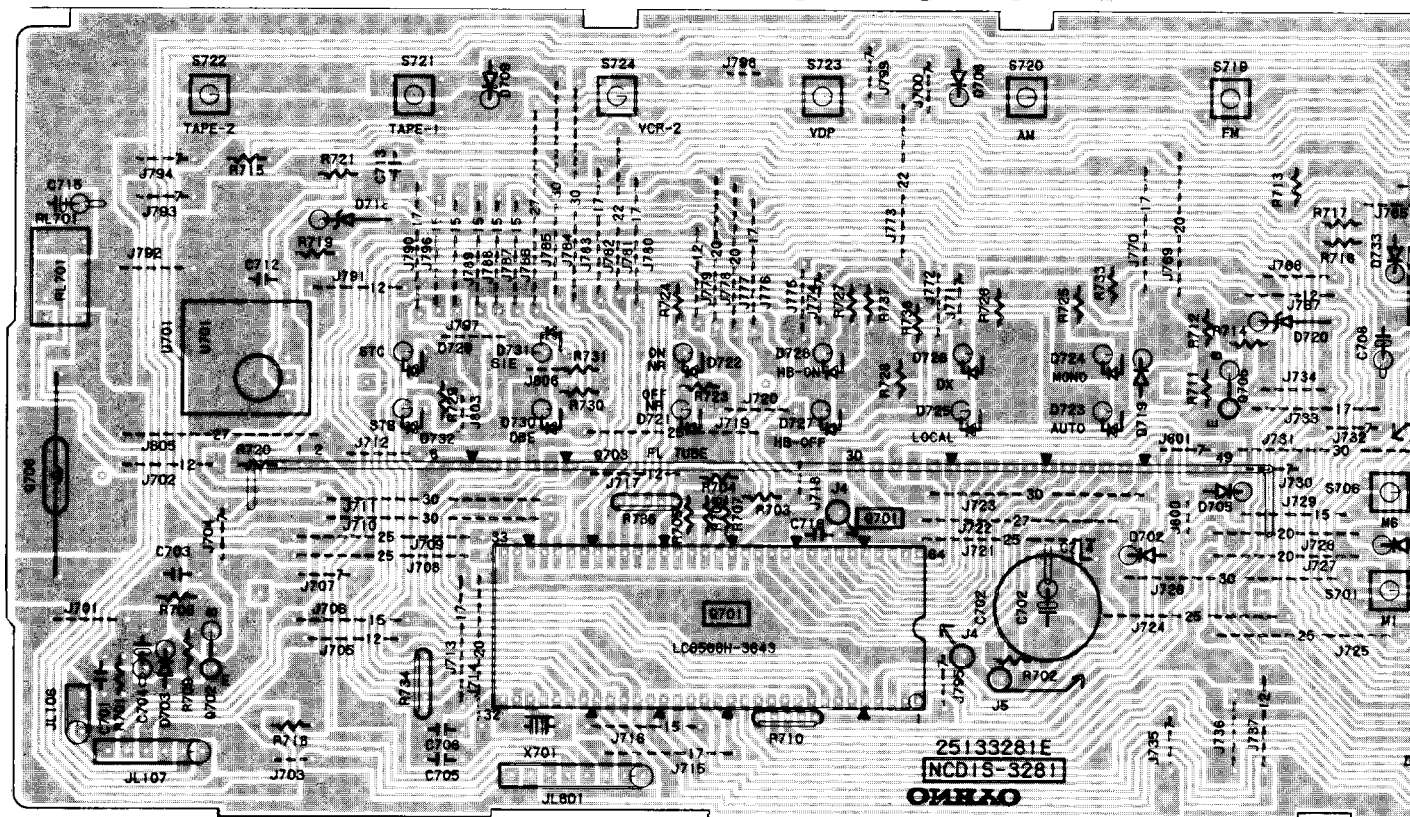

DISPLAY PC BOARD


PRINTED CIRCUIT BOARD-PARTS LIST

DISPLAY PC BOARD(NADIS-3281-3/3A/3B)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
U701	24130001 or 24130003	GP1U501S or GP1U501XS
Q701	22240153	LC6568H-3643
Q704	22240243	LC6527C-3987
	Transistors	
Q702	2211255, 2212485 or 2210746	2SC1815(GR), JC501(Q) or 2SC945A(P)
Q705	2211455, 2212495 or 2210803	2SA1015(GR), JA101(Q) or 2SA733(P)
	Fluorescent tube	
Q703	212054	7-BT-95GK
	Lamp	
Q706	210064B	6.3V,0.25A
	Diodes	
D702-D715	223163	1SS133
D716,D717	223163	1SS133 <G/W>
D718	224650822, 224150822 or 224450822	HZ8.2EB2, 05AZ8.2Y or MTZ8.2B
D719	223163	1SS133
D720	224150562, 224650562 or 224450562	05AZ5.6Y, HZ5.6EB2 or MTZ5.6B
D733-D736	223163	1SS133
	L.E.Ds	
D721,D723	225137CG,	SEL2413ECG,
D725,D727	225137DG or	SEL2413EDG or
D729-D731	224137DY	SEL2413EDY
D722,D724	225142	SEL2913K
		D726,D728
		D732
		X701
		X702
		C702
		C704
		C707,C715
		C708
		R710
		R734,R735
		S701-S724
		S725
		RL701
		225142
		225141
		Osc. elements
		3010099
		3010150
		Capacitors
		3020027 or 3000051
		354780109
		354782299
		354741009
		Resistors
		49163473404
		49163104404
		Switches
		25035548
		25065286
		Relay
		25065298
		Holder
		27190643
		SEL2913K
		SEL2213C
		CSA4.00MG,Ceramic
		CST4.00MGW
		0.047F,5.5V or 0.047F,5.5V,Super
		1 μF,50V,Elect.
		0.22μF,50V,Elect.
		10μF,16V,Elect.
		47kohm×4, 1/10W,Network
		100kohm×4, 1/10W,Network
		NPS-111-S510
		NSS-22112,Band <W>
		NRL-1P1A-DC12-40
		L.E.D


SPEAKER SWITCH PC BOARD(NASW-3278-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
R549,R550	442520474	4.7ohm,1/2W,Metal oxide film resistors
R551,R552	441623914	390ohm,1W,Metal oxide film resistors
S502,S503	25035517	NPS-222-L479,Push switch
P503	25045187	HLJ-0541-01-010,Stereo headphone terminal
L501,L502	231001	S-1.3B,Coils

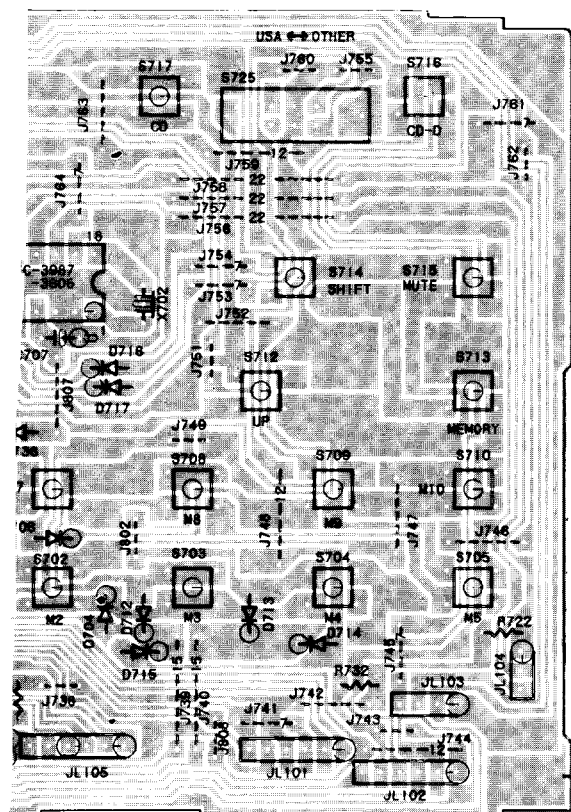


PREAMPLIFIER PC BOARD(NAAF-3283-3/3A)


CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q352	222579 or	NJM4560D or
	222570	NJM4560DX
Q353	222465 or	NJM4558DX
	222502	NJM4558D or
	Transistors	
Q851	2212600	DTA124ES
Q853	221281	DTC114YS
	Diodes	
D351	224650623,	HZ6.2EB3,
	224450623 or	MTZ6.2C or
	224150623	05AZ6.2Z
D352,D353	223163	1SS133
	Capacitors	
C359,C360	354780229	2.2 μ F,50V,Elect.
C363,C364	354741009	10 μ F,16V,Elect.
C367,C368	352983396	0.33 μ F,50V,Non-polar elect.
C373,C374	354780229	2.2 μ F,50V,Elect.
C375-C378	354781099	0.1 μ F,50V,Elect.
C389	354780229	2.2 μ F,50V,Elect.
C390,C392	354781099	0.1 μ F,50V,Elect.
C393,C851	354780339	3.3 μ F,50V,Elect.
	Resistors	
R371,R372	5104216	N14RLC50KC22Z, Variable,Bass
R379,R380	5104216	N14RLC50KC22Z, Variable,Treble
R451	5104225	N11RGLC250KW22Z, Variable,Bal- ance
	Switch	
S354	25035590	NPS-122-L552

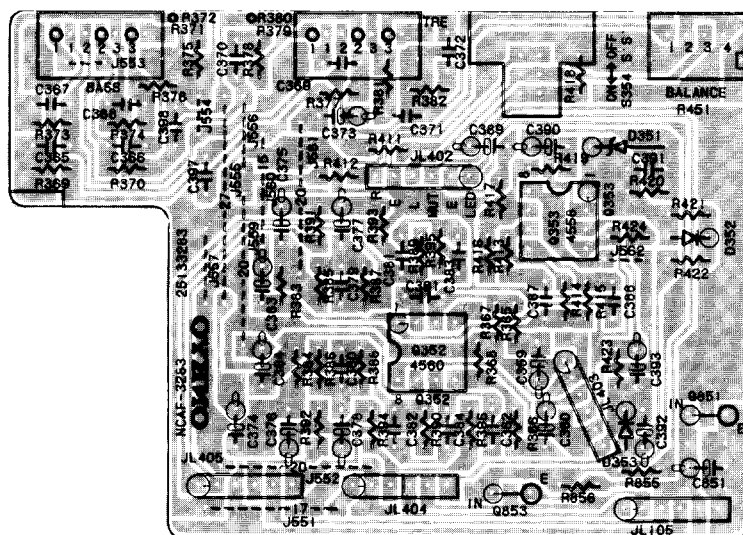

PREAMPLIFIER PC BOARD

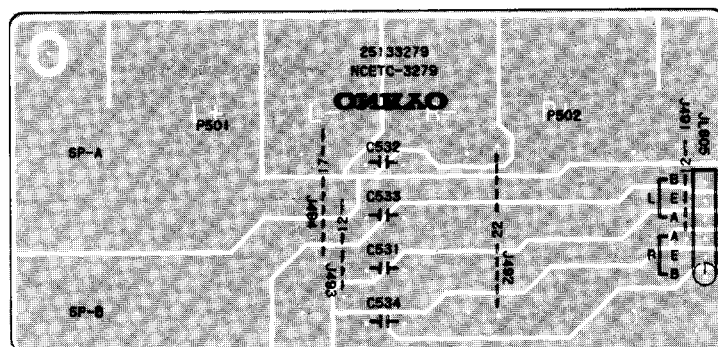

SPEAKER TERMINAL PC BOARD

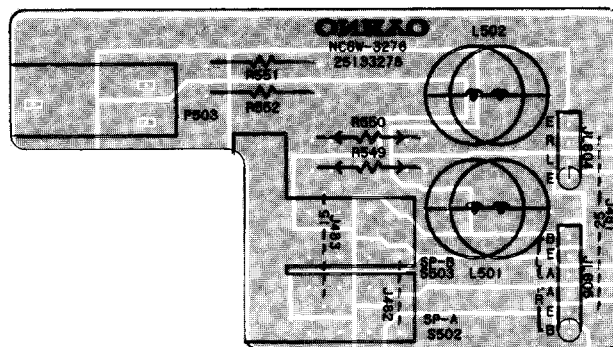


SPEAKER SWITCH PC BOARD

SPEAKER TERMINAL PC BOARD(NAETC-3279-3/3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
P501,P502	25060110 or	NTM-4PDMN 44 or
	25060039	NTM-4PDMN 10, Speaker terminal:

NOTE: <D>: Only 120V model
 <G>: Only 220V/240V models
 <W>: Only Worldwide model

– AMPLIFIER SECTION –
– 120V MODEL –

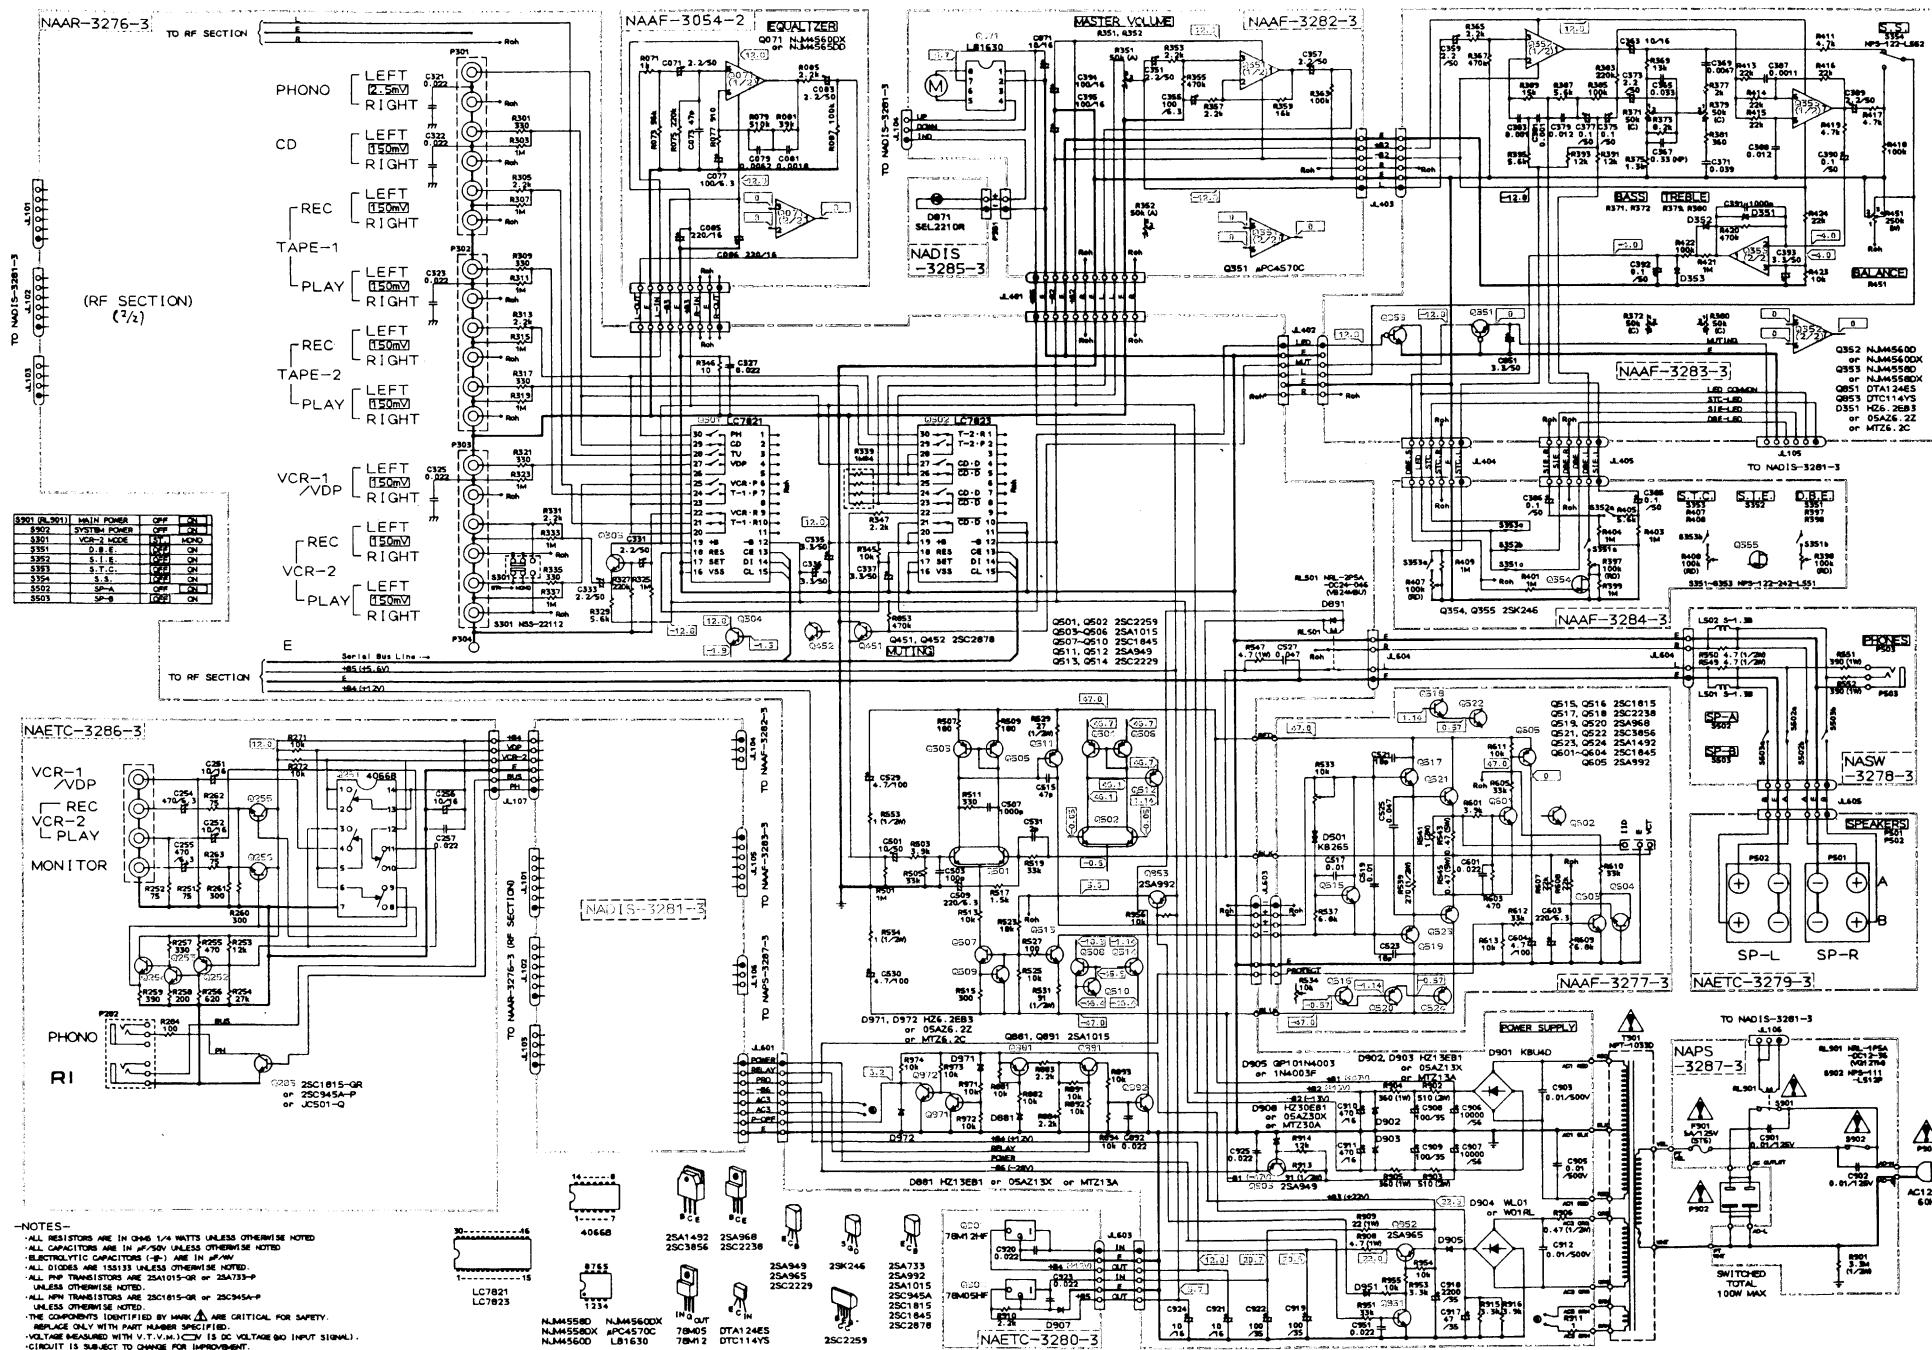


PRINTED CIRCUIT BOARD-PARTS LIST

FM/AM TUNER AND SELECTOR CIRCUIT PC BOARD(NAAR
-3276-3/3A/3B)

CIRCUIT NO.	PART NO.	DESCRIPTION
TU001	240070	TFFG1U116A <D>
	240081	TFFG3E141 <G/W>
ICs		
Q104	22240039	LA1266
Q201	222678	μ PC1161C3
Q301	22240079	LC7821
Q302	22240158	LC7823
Q731	22240090	LM7001
Transistors		
Q101	2212195	2SK241(GR) <G/W>
Q102	2211723	2SC1923(O)
Q103	2211723	2SC1923(O) <G/W>
Q105	2211255 or	2SC1815(GR) or
	2210746	2SC945A(P)
Q106,Q207	2211455	2SA1015(GR)
Q107	2212600	DTA124ES
Q202-Q204	2211945	2SK246(GR)
Q205,Q206	2211705 or	2SD655(E) or
	2212794	2SD1468(R)
Q303,Q304	2211255 or	2SC1815(GR) or
	2210746	2SC945A(P)
Q451,Q452	2212285 or	2SC2878(A) or
	2212286	2SC2878(B)
Q501,Q502	2211371 or	2SC2259(O-001) or
	2211372	2SC2259(O-002)
Q503-Q506	2211455	2SA1015(GR)
Q507-Q510	2211732 or	2SC1845(F) or
	2211733	2SC1845(E)
Q511,Q512	2211353 or	2SA949(O) or
	2211354	2SA949(Y)
Q513,Q514	2211633 or	2SC2229(O) or
	2211634	2SC2229(Y)
Q732	2212294	2SK108(D)
Q733	2211255 or	2SC1815(GR) or
Q802,Q892	2210746	2SC945A(P)
Q881,Q891	2211455	2SA1015(GR)
Q903	2211353 or	2SA949(O) or
	2211354	2SA949(Y)
Q951,Q971	2211255 or	2SC1815(GR) or
Q972	2210746	2SC945A(P)
Q952	2211643 or	2SA965(O) or
	2211644	2SA965(Y)
Q953	2211792 or	2SA992(F) or
	2211793	2SA992(E)
Diodes		
D101,D102	223132	1K60
D804	223163	1SS133
D891	223163	1SS133
D901	22380024	KBU4D
D902,D903	224151301,	05AZ13X,
	224451301 or	MTZ13A or
D881	224651301	HZ13EB1
D904	223862 or	WL01 or
	223890	W01RL
D905	223880 or	GP101N4003 or
	223896	1N4003F
D908	224153001,	05AZ30X,
	224453001 or	MTZ30A or
	224653001	HZ30EB1
D951	223163	1SS133
D971,D972	224650623,	HZ6.2EB3,
	224450623 or	MTZ6.2C or
	224150623	05AZ6.2Z
Transformers		
L101	233389	NFIF-4066

CIRCUIT NO.	PART NO.	DESCRIPTION
L102	233390	NFIF-4067
L152	232139	NMIF-4062
Coils		
L103	233383	NMC-6070 <G/W>
L104	233105	NCH-1005
L201,L202	233355A	NMC-4059
RF block		
L151	232148	NMRF-7050
Ceramic filters		
X101,X102	3010071	SFE10.7MA5 (RED) <D>
X101-X103	3010137	SFE10.7MMK <G/W>
X151	3010123	SFZ450JL
X152	3010076	BFU450C
X'tal		
X731	3010141	XTL-7.2M
Capacitors		
C001	354741009	10 μ F,16V,Elect.
C105	354742209	22 μ F,16V,Elect.
C106	354784799	0.47 μ F,50V,Elect.
C110	354741019	100 μ F,16V,Elect.
C111	354780109	1 μ F,50V,Elect.
C116	354780229	2.2 μ F,50V,Elect.
C151	354780339	3.3 μ F,50V,Elect.
C152	354741009	10 μ F,16V,Elect.
C153	354780479	4.7 μ F,50V,Elect.
C154,C157	354741009	10 μ F,16V,Elect.
C159	354782299	0.22 μ F,50V,Elect.
C201	354742209	22 μ F,16V,Elect.
C204	354744719	470 μ F,16V,Elect.
C207,C208	354741009	10 μ F,16V,Elect.
C209,C210	354780229	2.2 μ F,50V,Elect.
C215	354782299	0.22 μ F,50V,Elect.
C216	354780109	1 μ F,50V,Elect.
C217	354780339	3.3 μ F,50V,Elect.
C218	370134714	470pF \pm 5%,100V,APS
C221	354784799	0.47 μ F,50V,Elect.
C331-C334	354780229	2.2 μ F,50V,Elect.
C335-C337	354780339	3.3 μ F,50V,Elect.
C501,C502	354781009	10 μ F,50V,Elect.
C509,C510	354722219	220 μ F, 6.3V,Elect.
C529,C530	354790479	4.7 μ F, 100V,Elect.
C733	354721019	100 μ F, 6.3V,Elect.
C737	354780479	4.7 μ F,50V,Elect.
C738	354782299	0.22 μ F,50V,Elect.
C806	354780109	1 μ F,50V,Elect.
C903,C905	335251039	0.01 μ F,500V,Ceramic
C906,C907	3504224	10000 μ F,56V,Elect.
C908,C909	354761019	100 μ F,35V,Elect.
C910,C911	354744719	470 μ F,16V,Elect.
C912	335251039	0.01 μ F,500V,Ceramic
C917	354764709	47 μ F,35V,Elect.
C918	354762229	2200 μ F,35V,Elect.
C919	354761019	100 μ F,35V,Elect.
C921,C924	354741009	10 μ F,16V,Elect.
C922	354761019	100 μ F,35V,Elect.
Resistors		
R101	5210067	N06HR33KBD,Semi-fixed
R102	5210072	N06HR220KBD,Semi-fixed
R151	5210064	N06HR10KBD,Semi-fixed
R201	5210062	N06HR4.7KBD,Semi-fixed
R202	5210072	N06HR220KBD,Semi-fixed
R339,R340	49163105404	1Mohm \times 4,1/10W,Network
R529,R530	442522704	27ohm,1/2W,Metal oxide film
R531,R532	442529104	91ohm,1/2W,Metal oxide film

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

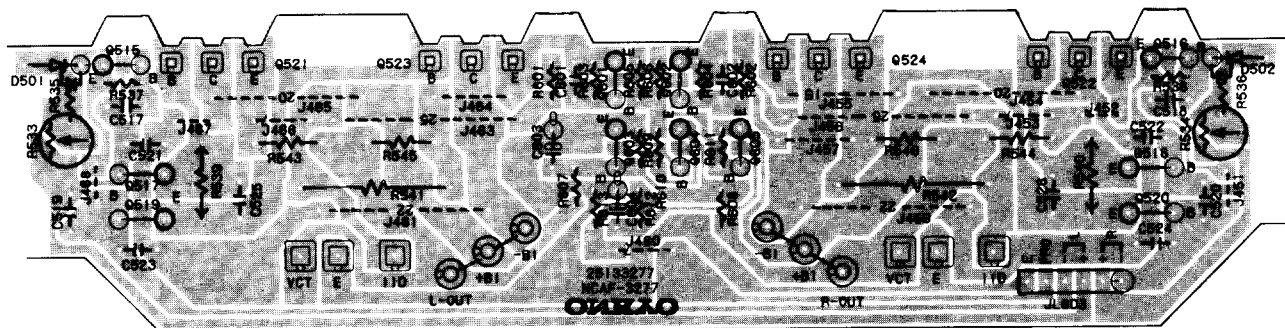

POWER AMPLIFIER PC BOARD

CIRCUIT NO.	PART NO.	DESCRIPTION
R547,R548	441620474	4.7ohm,1W,Metal oxide film
R553,R554	442520104	1ohm,1/2W,Metal oxide film
R902,R903	441725114	510ohm,2W,Metal oxide film
R904, R905	441623614	360ohm,1W,Metal oxide film <D>
	441623314	330ohm,1W,Metal oxide film <G/W>
R906	442524794	0.47ohm, 1/2W,Metal oxide film
R908	441620474	4.7ohm,1W,Metal oxide film
R909	441622204	22ohm,1W,Metal oxide film
R913	442529104	91ohm, 1/2W,Metal oxide film
	Relay	
RL501	25065339	NRL-2P5A-DC24-046
	Terminals	
P001	25060085	NTM-4PDMN29,Antenna <D>
	25060087	NTM-2PDMN31,Antenna <G/W>
P301-P303	25045213	NPJ-6PDBL-92
	Switch	
S301	25065286	NPS-22112,VCR mode
	Sockets	
P101,P102	25050270	NSCT-6P98
P402,P602	25050270	NSCT-6P98
P103	25050268	NSCT-4P96
P401	25050275	NSCT-11P103
P601	25050272	NSCT-8P100
JL406	25050269	NSCT-5P97<G/W>
	Radiator	
	27160166	

NOTE: <D>: Only 120V model
 <G>: Only 220V model
 <W>: Only Worldwide model

POWER AMPLIFIER PC BOARD(NAAF-3277-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q515,Q516	2211255	2SC1815(GR)
Q517,Q518	2200863 or 2200864	2SC2238(O) or 2SC2238(Y)
Q519,Q520	2200873 or 2200874	2SA968(O) or 2SA968(Y)
Q521,Q522 ☆	2201653, 2201654 or 2201655	2SC3856(O), 2SC3856(Y) or 2SC3856(P)
Q523,Q524 ☆	2201663, 2201664 or 2201665	2SA1492(O), 2SA1492(Y) or 2SA1492(P)

CAUTION: Replacement for transistor of mark ☆,if necessary, must be made from the same beta group (H_{FE}) as the original type.

Ex. 2SC3856(O) 2SA1492(O)

Same beta group

Q601-Q604	2211732 or 2211733	2SC1845(F) or 2SC1845(E)
Q605	2211792 or 2211793	2SA992(F) or 2SA992(E)

Diodes

D501,D502	4000120	KB265
-----------	---------	-------

Capacitors

C603	354722219	220 μ F, 6.3V,Elect.
C604	354790479	4.7 μ F, 100V,Elect.

Resistors


R533,R534	5210064	N06HR10KBD,Semi-fixed
R539,R540	442522714	270ohm,1/2W,Metal oxide film
R541,R542	441720104	1ohm,2W,Metal oxide film
R543-R546	4000080 or 4500022	0.47ohm,5W,Metal plate

Terminals

25060118	NTM-1S52,For leg of power transistor
----------	--------------------------------------

SCHEMATIC DIAGRAM

- TUNER SECTION -
- 120V MODEL -

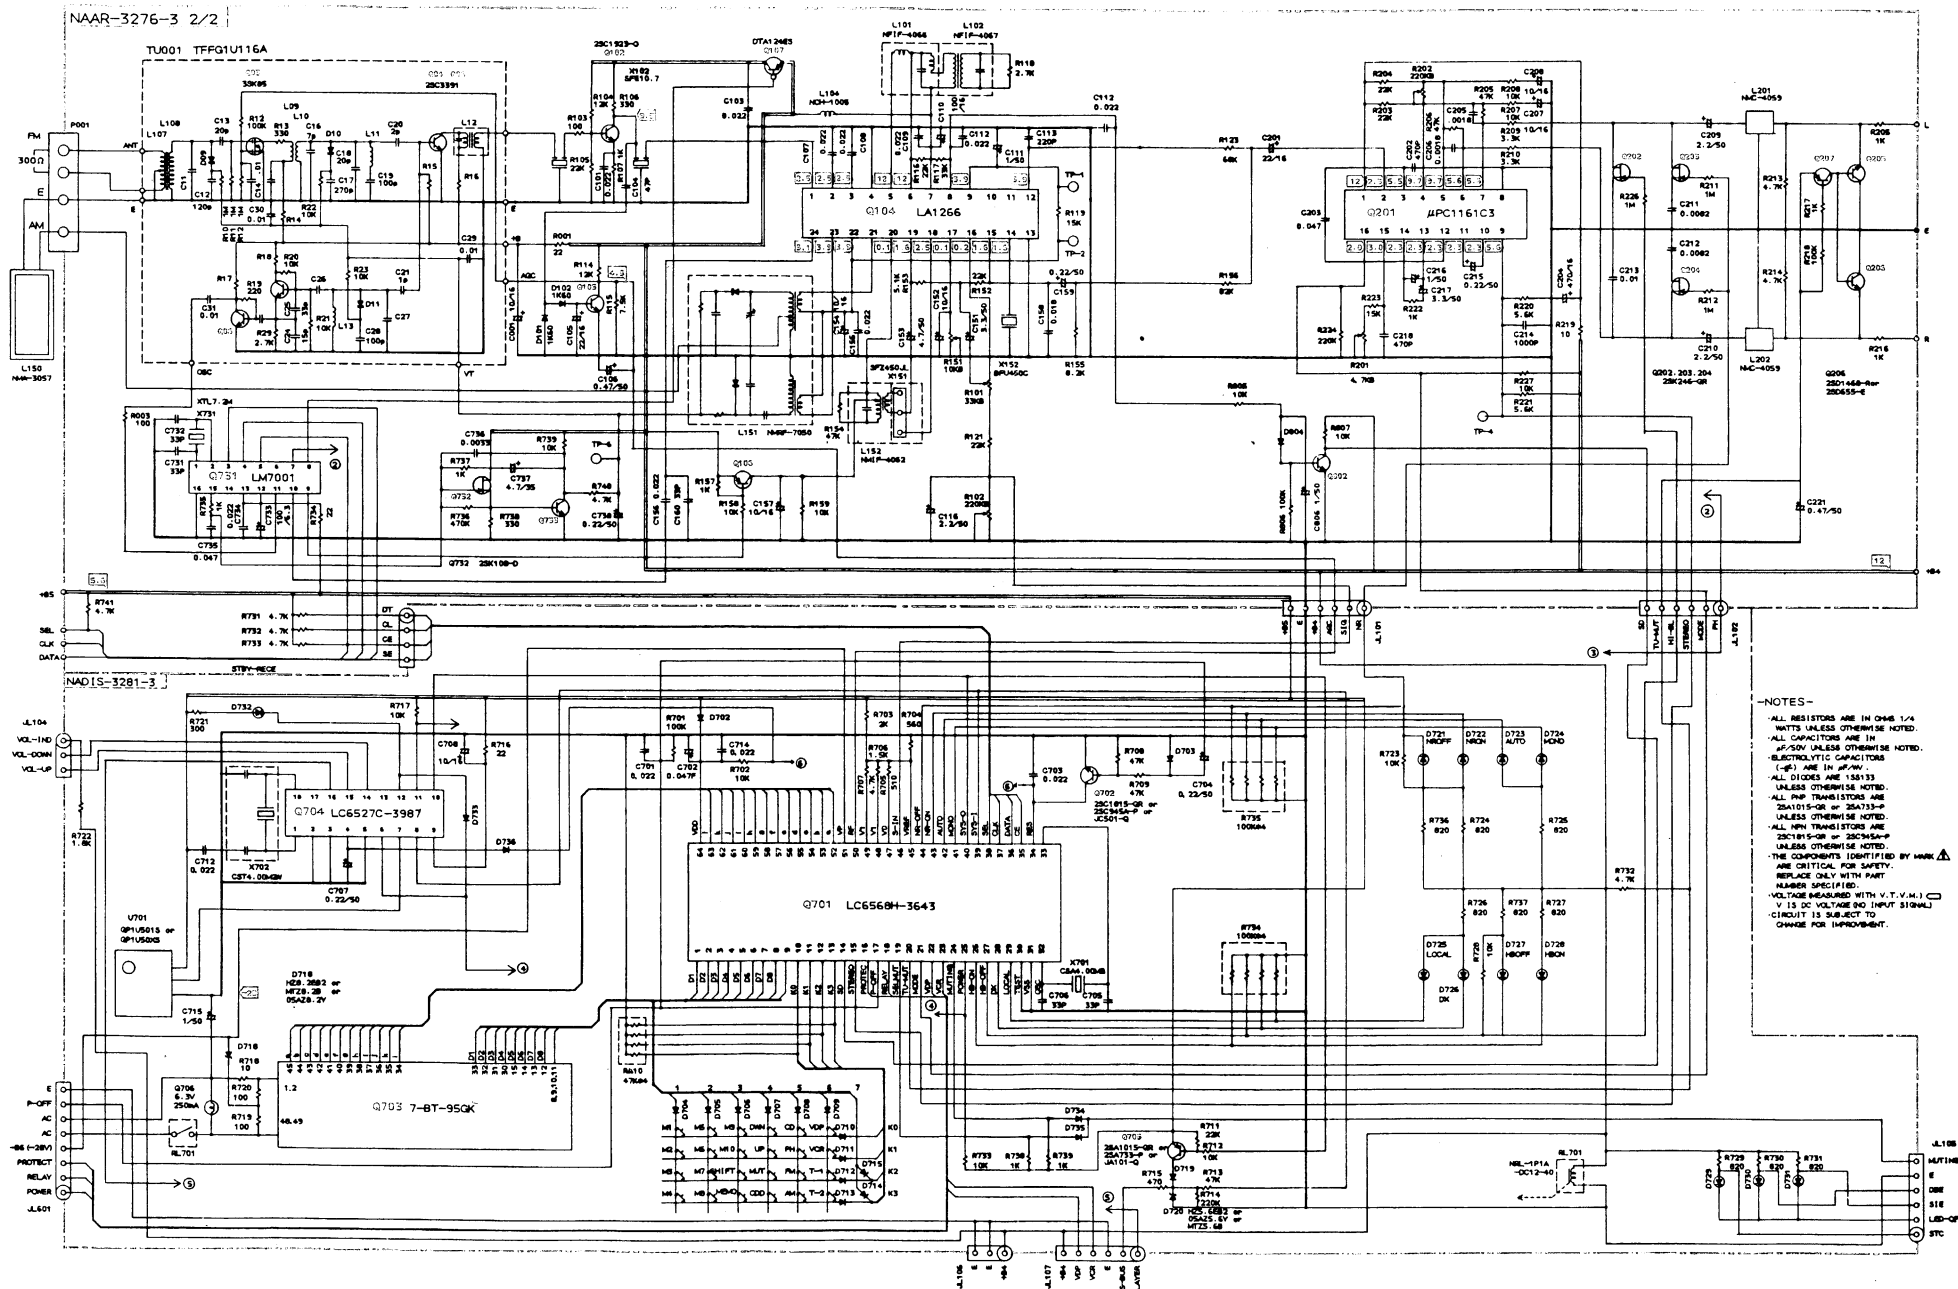

PRINTED CIRCUIT BOARD-PARTS LIST

VIDEO TERMINAL PC BOARD(NAETC-3286-3/3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q251	222840661	4066B
	Transistors	
Q252	2211455 or 2210803	2SA1015(GR) or 2SA733(P)
Q253-Q256	2211255 or 2210746	2SC1815(GR) or 2SC945A(P)
Q283	2212485, 2211255 or 2210746	JC501(Q), 2SC1815(GR) or 2SC945A(P)<D>
	Capacitors	
C251, C252	354741009	10 μ F, 16V, Elect.
C254, C255	354724719	470 μ F, 6.3V, Elect.
C256	354741009	10 μ F, 16V, Elect.
	Terminals	
P251	25045216	NPJ-4PDBL94
P282	25045172	HSJ1003-01-020

VOLUME PC BOARD(NAAF-3282-3/NAAF-3574-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q351	22240050	μ PC4570C, IC
Q871	222963	LB1630, IC
C351, C352	354780229	2.2 μ F, 50V, Elect. capacitors
C355, C356	354721019	100 μ F, 6.3V, Elect. capacitors
C357, C358	354780229	2.2 μ F, 50V, Elect. capacitors
C394, C395	354741019	100 μ F, 16V, Elect. capacitors
C871	354741009	10 μ F, 16V, Elect. capacitor
R351, R352	5104234	N16RGM50KA30F, Variable resistor, Volume <D>
R351, R352 R431, R432	5144009C	N16RGL50KA50KB30F, Variable resistor, Volume <G/W>
P351	2000635A	NSAS-4P591, Socket
JL403	25050270	NSCT-6P98, Socket
JL104	25050267	NSCT-3P65 Socket <G/W>

VOLUME INDICATOR PC BOARD(NADIS-3285-3/NADIS-3575-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
D871	225241 or 225242 27190545	SEL2210R-C or SEL2210R-D, LED Holder, LED

CONST. VOLTAGE CIRCUIT PC BOARD(NAETC-3280-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q901	222780125	NEC 78M12HF, IC
Q902	222780055	NEC 78M05HF, IC
D907	223163	1SS133, Diode

SWITCH PC BOARD(NAAF-3284-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q354, Q355	2211945	2SK246(GR)
	Capacitors	
C385, C386	354781099	0.1 μ F, 50V, Elect.
	Resistors	
R397, R398	6182003	N25LGL100KRD10Z, Variable, D.B.E
R407, R408	6182003	N25LGL100KRD10Z, Variable, S.T.C
	Switches	
S351-S353	25035589	NPS-122-242-L551

EQUALIZER AMPLIFIER PC BOARD(NAAF-3054-2/3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q071	22240191 or 222570	NJM4565DD or NJM4560DX
	Elect. capacitors	
C071, C072	354780229	2.2 μ F, 50V
C077, C078	354721019	100 μ F, 6.3V
C083, C084	354780229	2.2 μ F, 50V
C085, C086	354742219	220 μ F, 16V
	Plug	
P071	25055334	NPLG-9P317

POWER SUPPLY CIRCUIT PC BOARD(NAPS-3287-3/3A/3B)

CIRCUIT NO.	PART NO.	DESCRIPTION
C901, C902	3500065A	Δ DE7150FZ103PAC400V/125V, Capacitor IS
R901	431523355	Δ 3.3Mohm, 1/2W, Solid resistor <D>
S902	25035550	Δ NPS-111-L512P, Power
RL901	25065269	Δ NRL-1P5A-DC12-36, Relay <D>
	25065248	Δ NRL-1P15A-DC12-29, Relay <G/ W>
F901a	250113	Δ SN5051, Fuseholders <D/W>
F901	252050	Δ 5A(ST-6), Primary fuse <D/W>
F902a	25050065	Δ YSH-403T, Fuseholders <G/W>
F902	252075	Δ 2.5A-SE-EAK, Primary fuse <G/ W>
F903a	25050065	Δ YSH-403T, Fuseholders <G>
F903	252075	Δ 2.5A-SE-EAK, Fuse for AC outlet <G>
	29360626-1	Label, fuse <D>

NOTE: <D>: Only 120V model
<G>: Only 220V model
<W>: Only Worldwide model

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

CHEMATIC DIAGRAM

TUNER SECTION –

OTHER MODELS –

NAAR-3276-3A/B 2/2

FM 75
AM

IC100
IC99
IC98
IC97
IC96
IC95
IC94
IC93
IC92
IC91
IC90
IC89
IC88
IC87
IC86
IC85
IC84
IC83
IC82
IC81
IC80
IC79
IC78
IC77
IC76
IC75
IC74
IC73
IC72
IC71
IC70
IC69
IC68
IC67
IC66
IC65
IC64
IC63
IC62
IC61
IC60
IC59
IC58
IC57
IC56
IC55
IC54
IC53
IC52
IC51
IC50
IC49
IC48
IC47
IC46
IC45
IC44
IC43
IC42
IC41
IC40
IC39
IC38
IC37
IC36
IC35
IC34
IC33
IC32
IC31
IC30
IC29
IC28
IC27
IC26
IC25
IC24
IC23
IC22
IC21
IC20
IC19
IC18
IC17
IC16
IC15
IC14
IC13
IC12
IC11
IC10
IC9
IC8
IC7
IC6
IC5
IC4
IC3
IC2
IC1

Q104 LA1266

Q201 JMC1161C3

Q701 LC656BH-3643

Q705 7-BT-950K

Q706 7-BT-950K

Q707 7-BT-950K

Q708 7-BT-950K

Q709 7-BT-950K

Q710 7-BT-950K

Q711 7-BT-950K

Q712 7-BT-950K

Q713 7-BT-950K

Q714 7-BT-950K

Q715 7-BT-950K

Q716 7-BT-950K

Q717 7-BT-950K

Q718 7-BT-950K

Q719 7-BT-950K

Q720 7-BT-950K

Q721 7-BT-950K

Q722 7-BT-950K

Q723 7-BT-950K

Q724 7-BT-950K

Q725 7-BT-950K

Q726 7-BT-950K

Q727 7-BT-950K

Q728 7-BT-950K

Q729 7-BT-950K

Q730 7-BT-950K

Q731 7-BT-950K

Q732 7-BT-950K

Q733 7-BT-950K

Q734 7-BT-950K

Q735 7-BT-950K

Q736 7-BT-950K

Q737 7-BT-950K

Q738 7-BT-950K

Q739 7-BT-950K

Q740 7-BT-950K

Q741 7-BT-950K

Q742 7-BT-950K

Q743 7-BT-950K

Q744 7-BT-950K

Q745 7-BT-950K

Q746 7-BT-950K

Q747 7-BT-950K

Q748 7-BT-950K

Q749 7-BT-950K

Q750 7-BT-950K

Q751 7-BT-950K

Q752 7-BT-950K

Q753 7-BT-950K

Q754 7-BT-950K

Q755 7-BT-950K

Q756 7-BT-950K

Q757 7-BT-950K

Q758 7-BT-950K

Q759 7-BT-950K

Q760 7-BT-950K

Q761 7-BT-950K

Q762 7-BT-950K

Q763 7-BT-950K

Q764 7-BT-950K

Q765 7-BT-950K

Q766 7-BT-950K

Q767 7-BT-950K

Q768 7-BT-950K

Q769 7-BT-950K

Q770 7-BT-950K

Q771 7-BT-950K

Q772 7-BT-950K

Q773 7-BT-950K

Q774 7-BT-950K

Q775 7-BT-950K

Q776 7-BT-950K

Q777 7-BT-950K

Q778 7-BT-950K

Q779 7-BT-950K

Q780 7-BT-950K

Q781 7-BT-950K

Q782 7-BT-950K

Q783 7-BT-950K

Q784 7-BT-950K

Q785 7-BT-950K

Q786 7-BT-950K

Q787 7-BT-950K

Q788 7-BT-950K

Q789 7-BT-950K

Q790 7-BT-950K

Q791 7-BT-950K

Q792 7-BT-950K

Q793 7-BT-950K

Q794 7-BT-950K

Q795 7-BT-950K

Q796 7-BT-950K

Q797 7-BT-950K

Q798 7-BT-950K

Q799 7-BT-950K

Q800 7-BT-950K

Q801 7-BT-950K

Q802 7-BT-950K

Q803 7-BT-950K

Q804 7-BT-950K

Q805 7-BT-950K

Q806 7-BT-950K

Q807 7-BT-950K

Q808 7-BT-950K

Q809 7-BT-950K

Q810 7-BT-950K

Q811 7-BT-950K

Q812 7-BT-950K

Q813 7-BT-950K

Q814 7-BT-950K

Q815 7-BT-950K

Q816 7-BT-950K

Q817 7-BT-950K

Q818 7-BT-950K

Q819 7-BT-950K

Q820 7-BT-950K

Q821 7-BT-950K

Q822 7-BT-950K

Q823 7-BT-950K

Q824 7-BT-950K

Q825 7-BT-950K

Q826 7-BT-950K

Q827 7-BT-950K

Q828 7-BT-950K

Q829 7-BT-950K

Q830 7-BT-950K

Q831 7-BT-950K

Q832 7-BT-950K

Q833 7-BT-950K

Q834 7-BT-950K

Q835 7-BT-950K

Q836 7-BT-950K

Q837 7-BT-950K

Q838 7-BT-950K

Q839 7-BT-950K

Q840 7-BT-950K

Q841 7-BT-950K

Q842 7-BT-950K

Q843 7-BT-950K

Q844 7-BT-950K

Q845 7-BT-950K

Q846 7-BT-950K

Q847 7-BT-950K

Q848 7-BT-950K

Q849 7-BT-950K

Q850 7-BT-950K

Q851 7-BT-950K

Q852 7-BT-950K

Q853 7-BT-950K

Q854 7-BT-950K

Q855 7-BT-950K

Q856 7-BT-950K

Q857 7-BT-950K

Q858 7-BT-950K

Q859 7-BT-950K

Q860 7-BT-950K

Q861 7-BT-950K

Q862 7-BT-950K

Q863 7-BT-950K

Q864 7-BT-950K

Q865 7-BT-950K

Q866 7-BT-950K

Q867 7-BT-950K

Q868 7-BT-950K

Q869 7-BT-950K

Q870 7-BT-950K

Q871 7-BT-950K

Q872 7-BT-950K

Q873 7-BT-950K

Q874 7-BT-950K

Q875 7-BT-950K

Q876 7-BT-950K

Q877 7-BT-950K

Q878 7-BT-950K

Q879 7-BT-950K

Q880 7-BT-950K

Q881 7-BT-950K

Q882 7-BT-950K


Q883 7-BT-950K

Q884 7-BT-950K

Q885 7-BT-950K

Q886 7-BT-950K

Q887 7-BT-950K

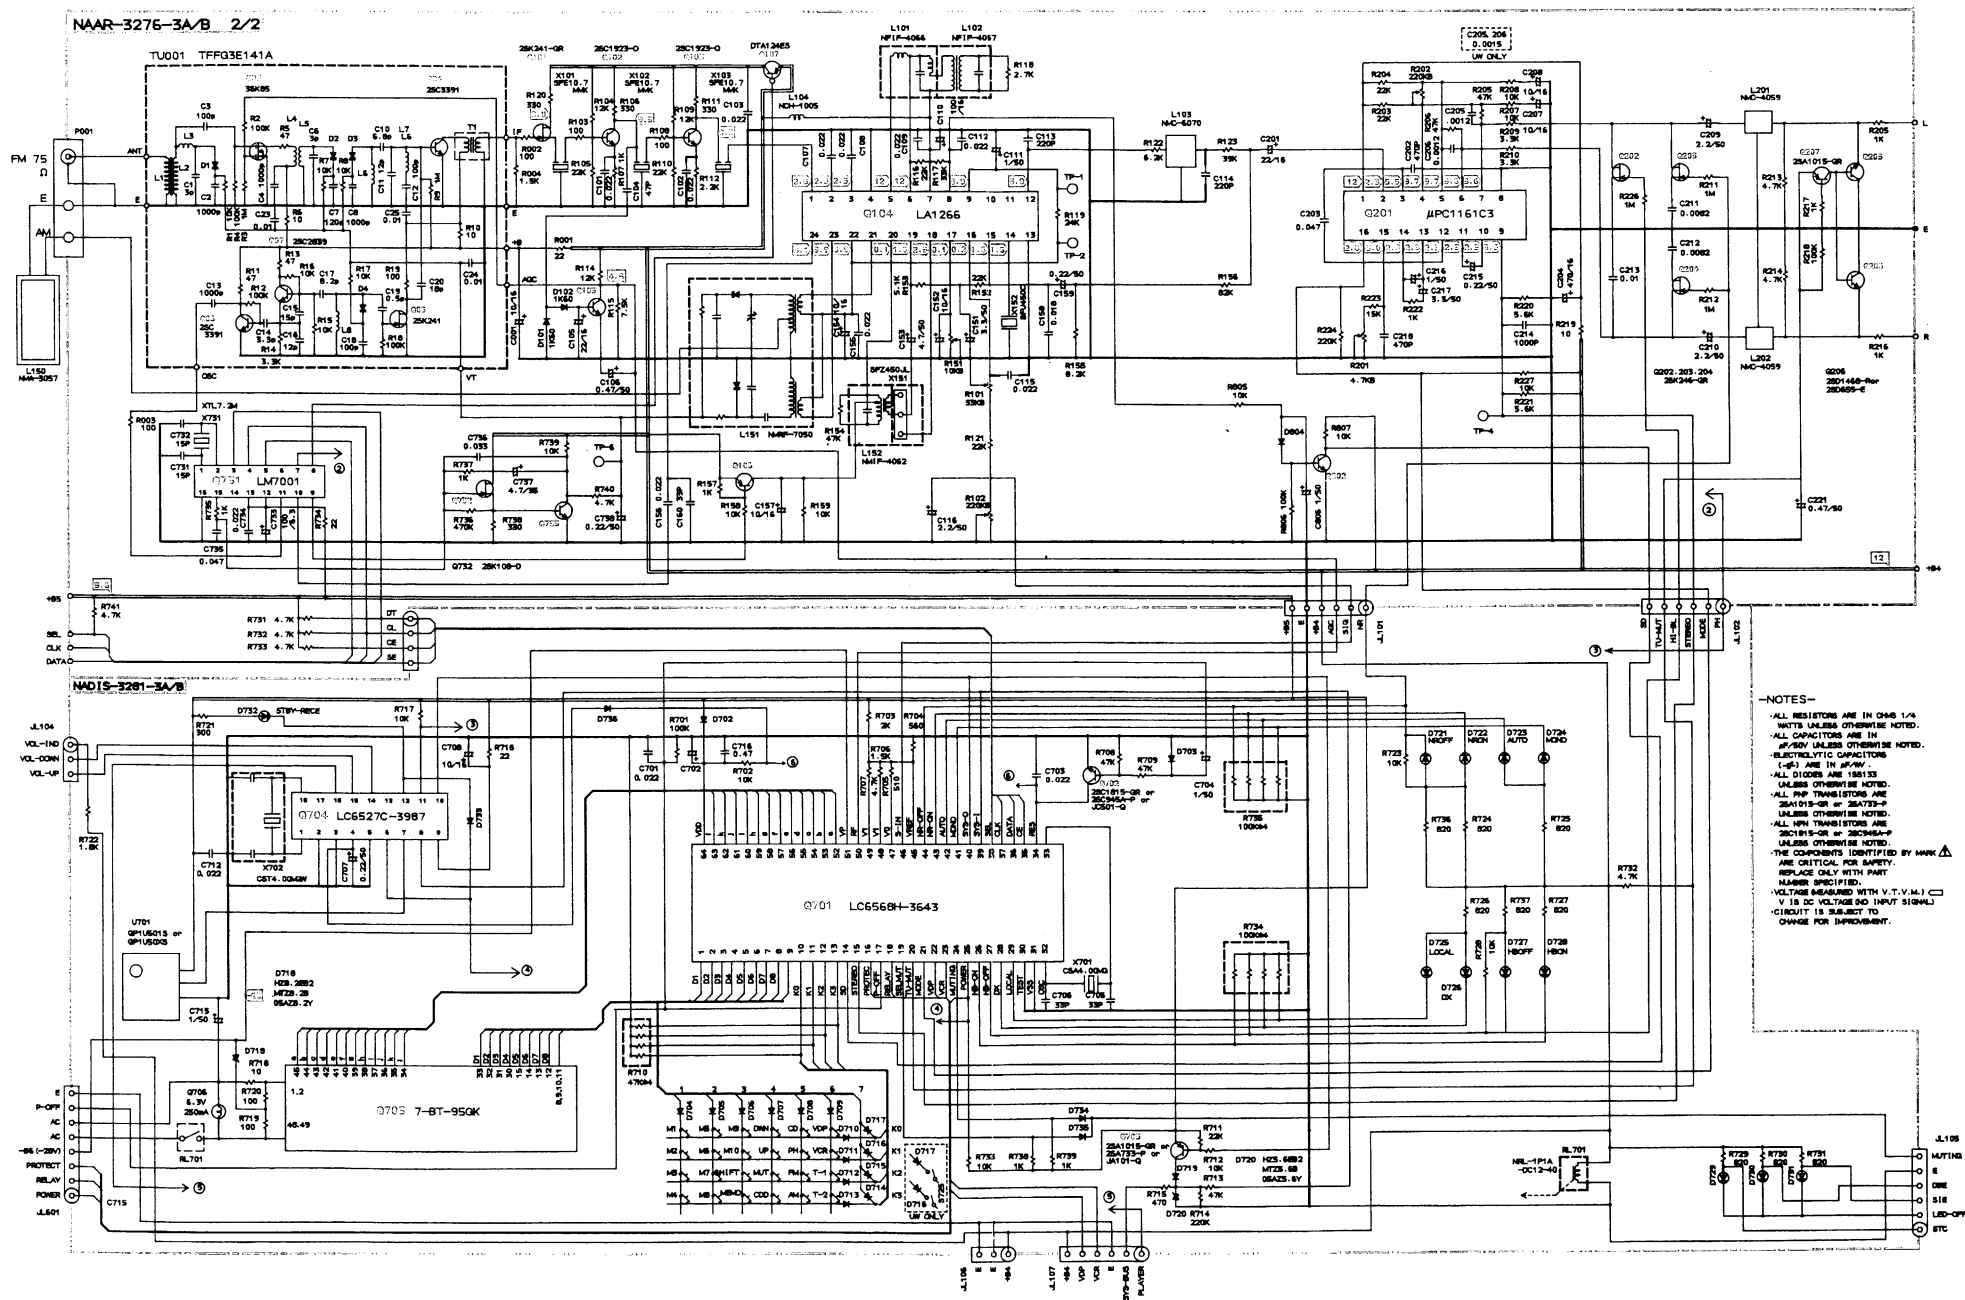

DISASSEMBLING PROCEDURES

1. Top cover


Remove a screw (3TTS+8BQ(BC)) holding the top cover and the back panel.
Remove the four screws (3TTS+8B(BC)) holding the back panel and the chassis.

2. Front panel

Remove the top cover.
Remove the six screws (3TTP+8P(BC)) holding the front panel and the front basket.


3. Power amplifier pc board

Remove the top cover.
Remove the five screws A.
Cut the binder B.

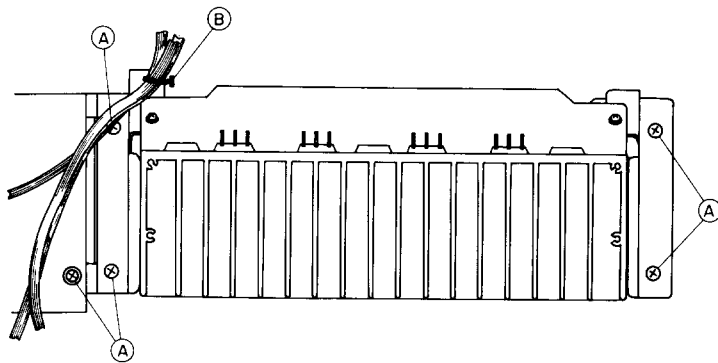


4. FM/AM tuner and selector switch pc board

Remove the top cover.
Remove the three screws C holding the pc board and chassis.
Remove the five screws D holding the back panel and chassis.
Remove the pc board from the two holders.

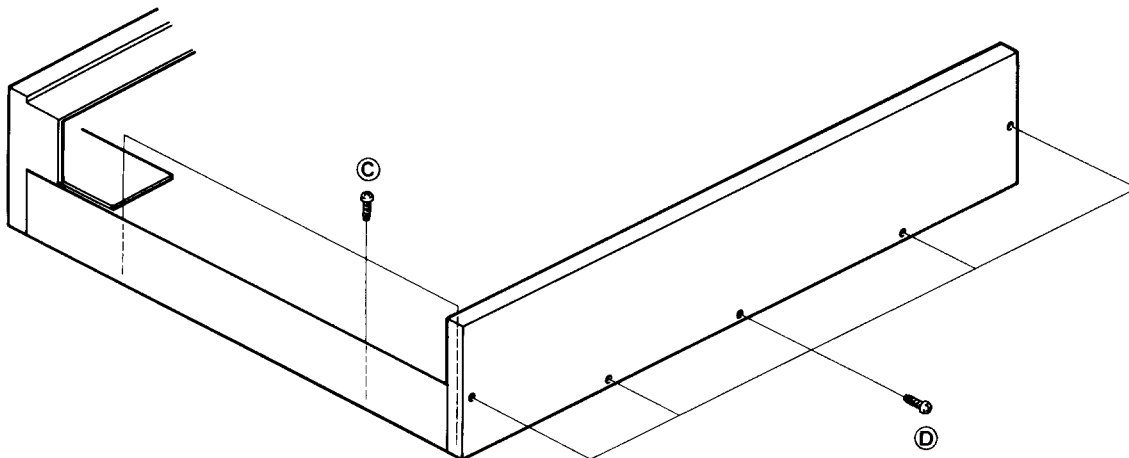

PACKING VIEW

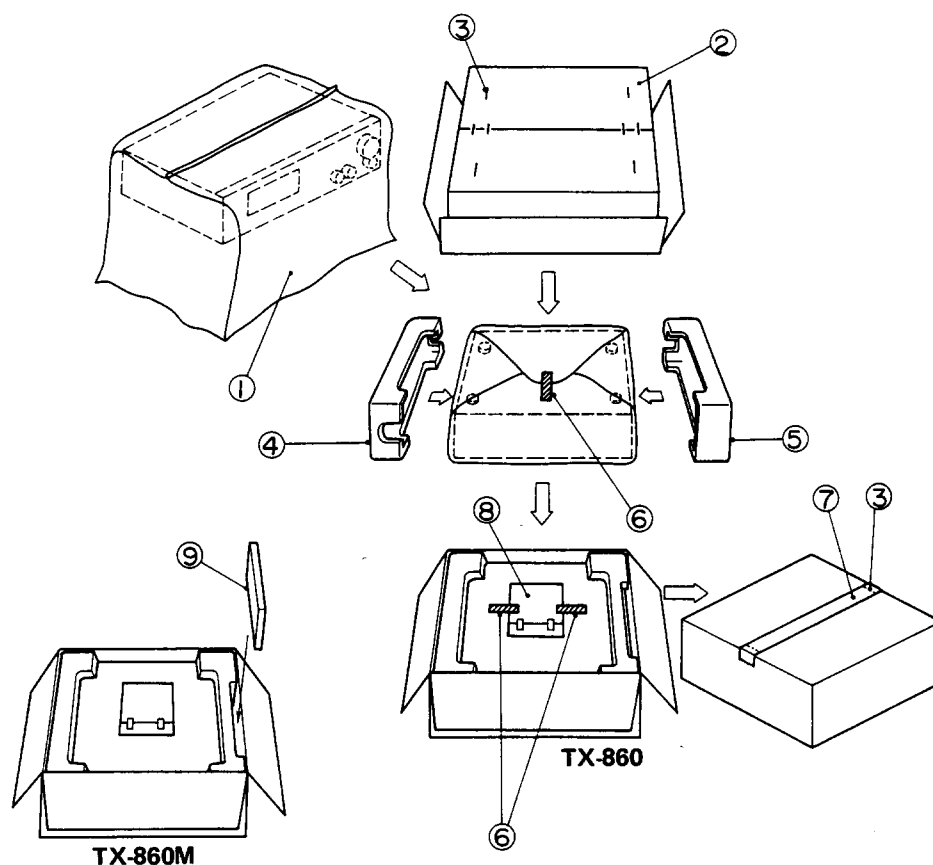

REF. NO.	PART NO.	DESCRIPTION
1	29100034	850×650mm, Poly-vinyl bag
2	29051911	Master carton box (TX-860)
	29051953	Master carton box (TX-860M)
3	282320	Sealing hook
4	29091263A	Pad R
5	29091262A	Pad L
6	261504	Adhesive tape
7	29110046	Damplon tape
8		Accessory bag ass'y
		-120V model-
	29341409	Instruction manual
	292064B	FM antenna
	232140	NMA-3057, AM loop antenna
	2010169	Connection cord for RI
	3010054	UM-3, Two batteries (TX-860)
		UM-3, Four batteries (TX-860M)
	24140151	RC-151S, Remote control transmitter (TX-860)
	29100097	250×350mm, Poly-vinyl bag
	29365019	Warranty card (U.S.A. model)
	29358002G	Service station list (U.S.A. model)
		-220V/240V models-
	29341411	Instruction manual
	292092	FM antenna
	232140	NMA-3057, AM loop antenna
	2010169	Connection cord for RI
	3010124	UM-4, Two batteries
	24140149	RC-149S, Remote control transmitter
	29100097	250×350mm, Poly-vinyl bag
	25060123	FM adaptor (240V model)
		-Worldwide model-
	29341411	Instruction manual
	292092	FM antenna
	232140	NMA-3057, AM loop antenna
	2010169	Connection cord for RI
	3010124	UM-4, Two batteries
	24140149	RC-149S, Remote control transmitter
	29100097	250×350mm, Poly-vinyl bag
	25060123	FM adaptor
	25055018	CV-K-1, Conversion plug
	24140035	RC-AV20, Remote control transmitter (TX-860M)
9	29341378	Instruction manual for remote control transmitter (Refer to the service manual of RC-AV20M)

ONKYO CORPORATION

International Division: No. 24 Mori Bldg., 23-5, Nishi-Shimbashi 3-chome, Minato-ku, TOKYO 105. JAPAN Telex: 242-3551 ONKYO J. Tel. 03-432-6981

ONKYO U.S.A CORPORATION

200 Williams Drive, Ramsey, N.J. 07446 Telex: 25-710-988-1033 Tel. 201-825-7950